

Filling station information

Fuel filler cap location



A small arrow on the fuel gauge indicates which side the fuel filler flap is located.

Fuel filler flap opening




The fuel filler flap can be opened only when the vehicle is unlocked. Press the fuel filler flap to open.

Operating note

The fuel flap has a spring loaded self release mechanism. Do not pull it open.

Operating the filler cap

Twist the cap counter-clockwise to undo.

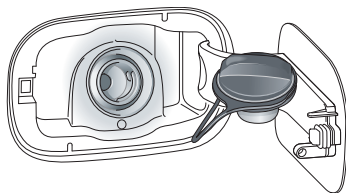

A hook is provided on the flap hinge to hold the cap whilst refuelling. After refuelling, tighten the cap until it clicks three times.

Fuel specification

The correct fuel specification for your vehicle is shown on the inside of the fuel filler flap.

Incorrect fuelling

Do not use E85 fuels (85% Ethanol content). Equipment necessary for the use of fuels containing more than 10% Ethanol is not fitted to this vehicle. If E85 fuels are used serious engine and fuel system damage will occur.

Do not use RME (bio-diesel) except in the case of those proprietary diesel fuels which contain a mix of up to 5%. Land Rover can accept no responsibility for damage caused by using RME in concentrations greater than 5%.

For diesel vehicles, use diesel fuel to specification EN 590 with a maximum bio diesel mix of 5%.

Filling with the wrong fuel

If the vehicle is filled with the wrong type of fuel:

- DO NOT start the engine!
- Call for qualified assistance!

Diesel misfuelling prevention


To help protect against a diesel fuel tank being accidentally filled with petrol, a prevention device is fitted in the filler neck. It will activate if the wrong type of fuel nozzle is fully inserted. The narrow fuel nozzle associated with unleaded petrol pumps will cause a flap to close and so interrupt fuel flow.

The yellow flap will be visible in the filler neck and must be reset with the correct tool, stored with the vehicle tool kit. Refer to the **Fuel and refuelling** section in your Owner's Handbook for further details.

Bonnet release

The bonnet release is located in the left hand side footwell.

Tyre pressure label location

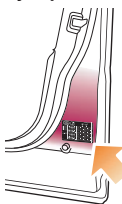

Tyre pressures are shown on a label attached to the pillar behind the driver's door or to the rear of the driver's door.