


## LIGHTING CONTROLS

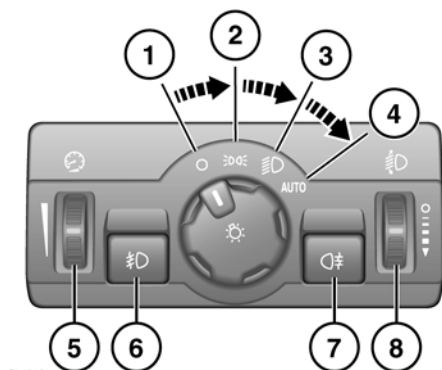

SL1013

1. Headlamps/side lamps off.
2. Side lamps on.
3. Low beam headlamps on.
4. Autolamps on.

With the switch in this position and the ignition on, the side lamps, low beam headlamps and licence plate lamps illuminate automatically when the ambient light level is low.

5. Dimmer control.

6. Front fog lamps on/off.

When the front fog lamps are on, the front fog lamp warning indicator will illuminate.


7. Rear fog lamps on/off.

When the rear fog lamps are on, the rear fog lamp warning indicator will illuminate.

8. Halogen lamps height adjuster.

9. When low beam headlamps are switched on, push the indicator stalk to change to high beam (the high beam warning lamp will illuminate).

10. To flash the headlamps at anytime, briefly pull the indicator stalk and release it.

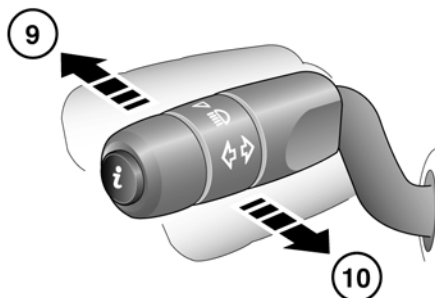


**Note:** Do not use high beam where it may dazzle other road users.

## CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

## ADJUSTING XENON HEADLAMPS FOR DRIVING OVERSEAS

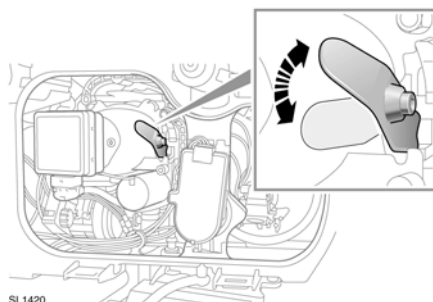

SL1420

**Note:** The headlamps must be removed in order to change the beam pattern. See **142**, **REMOVING A HEADLAMP UNIT**.

The tourist lever allows you to adjust the headlamps to the correct beam pattern for driving on the left or right hand side of the road.

When new, the lever will be set to the correct position for the country in which the vehicle is sold. To change the pattern for driving on the alternate side of the road, move the lever to the alternate position.

**Note:** When changing the beam pattern using the lever, ensure that you change the lever position on both headlamps.

## HEADLAMP LEVELLING

Use the headlamp levelling control to account for vehicle loading changes.

| Vehicle load                       | Switch position                     |
|------------------------------------|-------------------------------------|
| Driver only                        | 0                                   |
| Driver and front seat passenger    | 0                                   |
| Driver and passengers in all seats | Rotate down one position from 0.    |
| Maximum gross vehicle weight       | Rotate down two positions from 0.   |
| Maximum rear axle load             | Rotate down three positions from 0. |

## ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

When cornering using low beam, AFS will adjust the headlamp beams to provide improved illumination in the direction of travel.

AFS is deactivated when:-

- Reverse gear is selected.
- The vehicle is stationary.

- Daylight running lamps are on.

If a system fault is detected the headlamps will attempt to move to the central position, and remain stationary. The AFS warning indicator will illuminate to indicate that a fault is present.



If the warning indicator illuminates, contact your Dealer/Authorised Repairer as soon as possible.