


INTERIOR LAMPS

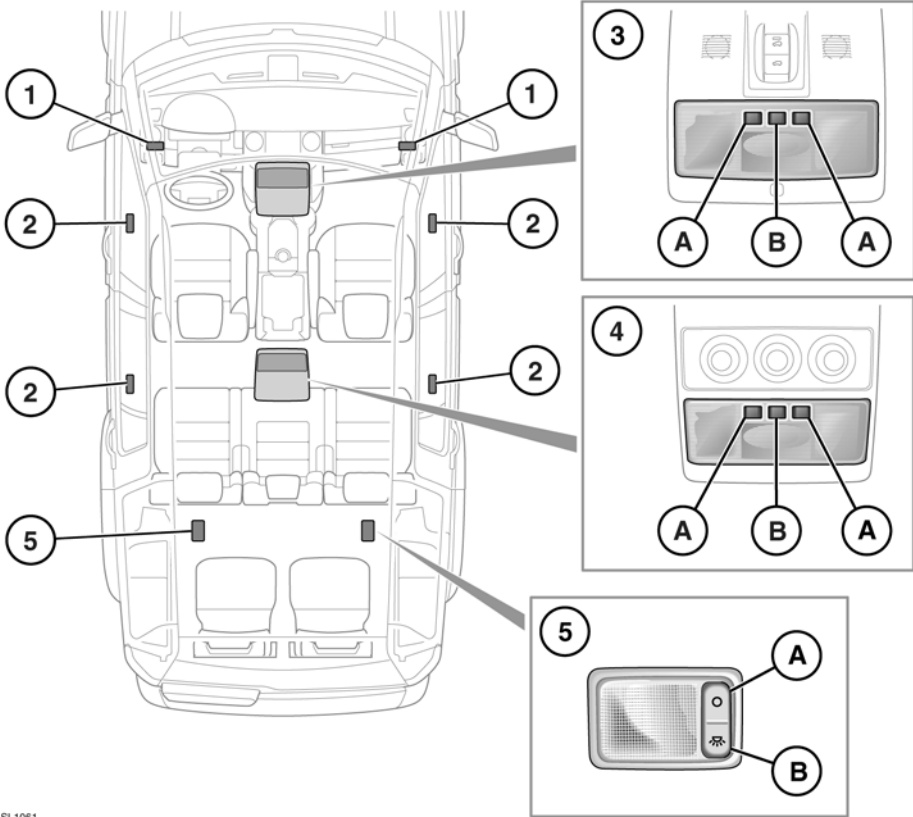

SL1061

1. Front footwell lamps:
Automatically illuminate when the doors are opened.
2. Puddle lamps:
Automatically illuminate when the doors are opened.

3. Map reading/interior lamps:

- A. Map light controls (on/off).
- B. Main interior lamp control (on/off/Auto).

To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.

4. Rear interior light control:

A. Map light controls (on/off).

B. Main interior lamp control (on/off/Auto).

To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.

5. Third row seating/loadspace interior lamps:

A. Press to turn off.

B. Press to turn on.