

## LOCKING AND ARMING THE ALARM.



**WARNING:** Before exiting the vehicle, always ensure that the gear selector is in the Park (P) position, the engine is turned off, the parking brake is applied and the Smart Key is removed from the vehicle.

Press the lock button on the Smart Key briefly, to lock the vehicle and activate the perimeter alarm. The hazard warning lamps will flash to confirm.

The perimeter alarm will sound if:

- The hood, tailgate or a door are opened.
- The vehicle battery is disconnected.
- An attempt is made to disconnect the alarm siren.

## ALARM INDICATOR


An indicator in the instrument panel will flash whenever the alarm is active.

## DRIVE-AWAY LOCKING

Drive-away locking automatically locks all the doors when the vehicle is in motion. This feature can be enabled/disabled via the Vehicle settings menu (see **61, VEHICLE INFORMATION AND SETTINGS MENU**).

**Note:** Pressing the lock or unlock button on the Smart Key will override drive-away locking for the current journey.

## DOOR LOCKS AND RELEASE LEVERS

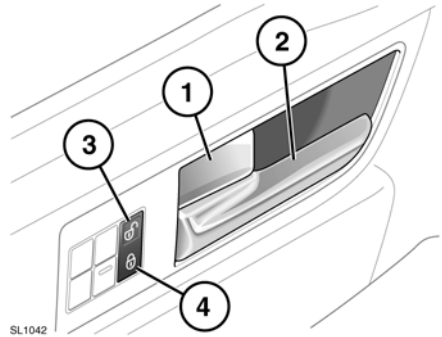

From inside the vehicle, all the doors can be locked by pressing either the driver or passenger lock lever (1).

Each rear door can be individually locked by pressing the appropriate locking lever.

To unlock and open a front door, pull the door handle (2). To unlock and open a rear door, first operate the lock lever, then pull the door handle.


**Master lock/unlock buttons:** To lock (4) or unlock (3) the vehicle press the respective button on the door.

**Note:** The master unlock button is inhibited when the vehicle is locked with the Smart Key.

## MISLOCK

When attempting to lock the vehicle, if one or more of the doors, the hood or the tailgate are not fully closed, the vehicle will fail to lock and the horn will emit two tones. The vehicle will not fully lock until all doors, the hood and the tailgate are completely closed.

## KEYLESS LOCKING

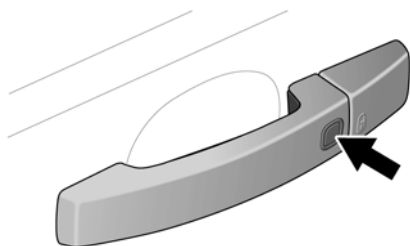

SL1143

The vehicle will not lock automatically.

To lock the vehicle press the keyless locking button (arrowed) on the door handle once. The hazard warning lamps will flash once to confirm. In some markets an audible warning will sound.

**Note:** Keyless locking will only activate if the Smart Key is detected outside the vehicle. If no Smart Key is present when the button is pressed, two warning tones will sound.

## DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered it can be deactivated by pressing the Smart Key unlock button, or by positioning the Smart Key underneath the steering column (see **76, KEYLESS START BACKUP**).

## VALET MODE

Accessible directly from the home screen or from the Vehicle settings screen. Valet mode allows the vehicle to be driven, but leaves the luggage compartment locked and restricts use of the touch screen.

To enable Valet mode, enter a personally chosen four digit Personal Identification Number (PIN) into the soft key pad displayed on the touch screen. If you wish to cancel entry of the PIN, touch the **C** button at any time during PIN entry.

After entering the PIN, you will be prompted to enter the PIN again. Enter the same PIN and touch **OK** to confirm.

A pop-up screen is displayed, confirming your vehicle is now in Valet mode.

## DESELECTING VALET MODE

On entering the vehicle, enter your PIN into the display, and touch the **OK** soft key.

**Note:** If the PIN number is lost or forgotten, the vehicle should be returned to your Land Rover Retailer/Authorized Repairer to have the PIN reset.