


## CONTROLS

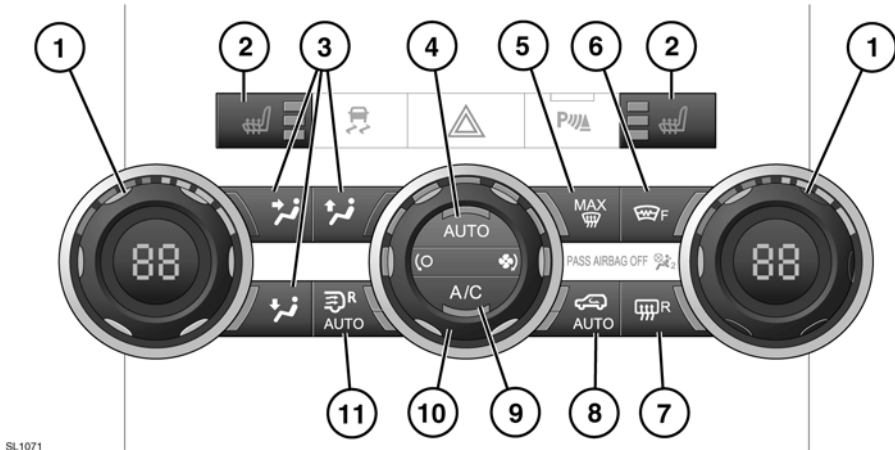

SL1071

1. Temperature controls.
2. Seat heaters: Press once to turn on high, twice to turn on low, and a third time to turn off.
3. Air distribution buttons.
4. Auto mode.
5. Defrost mode.
6. Heated front windshield.
7. Heated rear glass.
8. Air recirculation control
9. Air conditioning on/off: With air conditioning off, the system operates in economy mode, improving fuel economy.

**Note:** Using the system without air conditioning for long periods can cause the windows to mist.

10. Blower control:  
Rotate to adjust blower speed.  
Rotate fully counter-clockwise to turn the climate control system off.
11. Rear environment.

**Note:** The indicator lights in the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the center face level vent and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.

## AUTO MODE

Press **AUTO** to select automatic operation.

The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) and reduce misting without further adjustments.

The air distribution and blower controls may be operated independently to override Auto mode. If you do this, the indicator lamp on the AUTO switch will go out. Press **AUTO** again to return to automatic operation.

**Note:** The system will not achieve a temperature differential from left to right of more than 7°F (4°C).

## AIR DISTRIBUTION CONTROL

Press to select the desired distribution setting:



Windshield and side window vents



Face level vents



Foot level vents

**Note:** More than one setting may be selected at a time to achieve the desired distribution.

## RECIRCULATION



When selected, the air is recirculated inside the vehicle. This helps to maintain a high or low temperature, and is useful for preventing fumes entering the vehicle.

With climate control set to manual, recirculation can be selected as follows:

- Press briefly to activate timed recirculation. Recirculation will switch off automatically after a set time (dependent on the ambient temperature).
- Press and hold the button to activate latched recirculation. Recirculation will remain on until the button is pressed again.
- To cancel recirculation, press the button briefly.

**Note:** The windows can mist if recirculation is used for long periods.

Recirculation may also be selected in AUTO mode, if high levels of pollution in the atmosphere outside the vehicle are detected (if a pollution sensor is fitted). Manual operation of the recirculation control will override the automatic setting.

## RECIRCULATION WITH POLLUTION SENSOR



Press once to activate air recirculation. Press again to activate automatic air recirculation.

In automatic mode, air recirculation is regulated to achieve optimum air conditioning performance.

Press a third time to switch off.

**Note:** The windows can mist if recirculation is used for long periods.

## MAXIMUM DEFROST PROGRAM



Press to remove frost or heavy misting from the front screen. The system will automatically adjust the blower output for maximum clearing, in addition the front and rear glass heaters will be activated. Press again to switch off defrost mode. The screen heaters will remain on.

## REAR ENVIRONMENT



The rear environment unit provides climate control to the rear passengers.

- Press once to control the rear heating and air conditioning using the front controls only. The lower amber lamp is illuminated.
- Press a second time to allow the rear passengers to have manual control. The upper amber light is illuminated.
- Off: press a third time to switch off.

**Note:** Do not obstruct the vent on the side of the rear quarter panel.

## HEATED WINDSHIELDS



Heated windshield



Heated rear glass

Press button to operate the required screen heater. The screen heater(s) will operate for a predetermined timed period before automatically switching off.

The screen heaters will be automatically switched on if defrost mode is activated or if the external air temperature is low.





**CAUTION:** Do not attach labels to the rear glass. Do not scrape or use abrasive materials to clean the inside of the screen.

## HEATED MIRRORS

The heated external rear view mirrors operate automatically according to the external temperature and windshield wiper operation.

## REAR PASSENGER CLIMATE CONTROLS

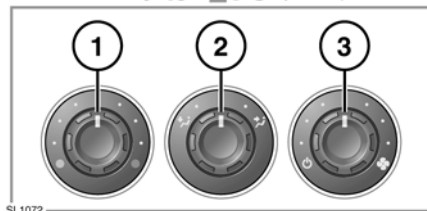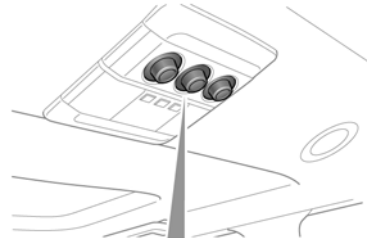

SL1072

1. Temperature control:  
Clockwise rotation increases the temperature.
2. Distribution control:  
Turn to the relevant icon to direct airflow. The control may be turned to a position between icons to split airflow between different vents.
3. Blower control.

**Note:** These controls only operate when the rear environment button is pressed twice, enabling rear manual operation.