


## OPERATION



**WARNING: Do not allow the telephone, navigation or touch screen systems to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**

Voice control allows you to operate the telephone, navigation and touch screen systems using spoken commands. A notepad facility also allows you to record notes.

The system is controlled by the Voice button, located on the steering wheel.

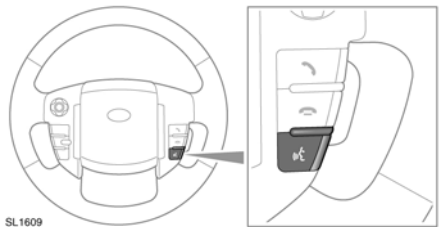

- Press briefly to start a Voice session.
- Press and hold to cancel a Voice session.

Once a Voice session is started, a tone will sound to indicate that the system is waiting for a voice command.

Give a command. The system will repeat the command (as understood by the system) back to you as confirmation. The command will then be acted on or the system will ask for further information. Always wait until after the tone before giving the next command.

If a command is not understood by the system, it will respond with **SORRY**. Two further attempts to give the command are permitted before the Voice session is cancelled.

Once you are familiar with operating Voice control, you can skip to the end of a Voice system request (to when the tone sounds) by briefly pressing the Voice button during the system request.

A command can be interrupted by saying **Cancel** or by pressing the steering wheel control.

To cancel a Voice command, press and hold the steering wheel control until a double tone is heard.

The following table lists the basic commands for operating the system (including help and tutorial commands).

| Command            | Description                                       |
|--------------------|---|
| VOICE HELP         | Plays information on operating the Voice system.  |
| VOICE TUTORIAL     | Initiates a four-part Voice system tutorial.      |
| DISPLAY HELP       | Plays information on touch screen Voice commands. |
| DISPLAY ON         | Turns on the touch screen.                        |
| DISPLAY OFF        | Turns off the touch screen.                       |
| DISPLAY SHOW PHONE | The Phone menu is displayed on the touch screen.  |
| PHONE HELP         | Plays information on phone Voice commands.        |
| DISPLAY SHOW AUDIO | The Audio Home screen is displayed.               |
| NAVIGATION HELP    | Plays information on navigation Voice commands.   |

| Command                 | Description   |
|-------------------------|---|
| DISPLAY SHOW NAVIGATION | The Navigation main menu is displayed on the touch screen (the navigation caution must be accepted beforehand). |
| NOTEPAD HELP            | Plays information on notepad commands.  |
| RECORD NOTE             | Allows recording of a note, up to 30 seconds long.  |
| PLAY NOTEPAD            | Plays all currently stored notes.   |
| CLEAR NOTEPAD           | Deletes all currently stored notes.   |

## VOICE TUTORIAL

To listen to a tutorial detailing the operation of the Voice system:

- Briefly press the Voice button to start a voice session.
- Wait for the tone to sound, then say **VOICE TUTORIAL**.

The voice tutorial can be cancelled at any time by briefly pressing the Voice button and saying **CANCEL**. Using the commands **PREVIOUS** and **NEXT** allow you to skip to a previous or the next lesson of the tutorial.

**Note:** *The vehicle must be stationary and parked during the tutorial.*

## VOICE SESSION INTERRUPTIONS

Certain conditions will cause the current voice session to be cancelled, as follows:

- If a phone call is received.
- If a high priority warning appears in the message center.
- If there is no user input for a sustained length of time.

Press the Voice button to start a new voice session.

## NOTEPAD

The notepad can be used to record notes, each up to 30 seconds long, which can be subsequently recalled.

## RECORDING A NOTE

1. Briefly press the Voice button, wait for the tone to sound, then say **RECORD NOTE**.
2. Speak the note, then press and hold the Voice button to end and save the note.

**Note:** *If the note exceeds 30 seconds the recording will end automatically.*

## PLAYING NOTES

Briefly press the Voice button, wait for the tone to sound, then say **PLAY NOTEPAD**.

If multiple notes are stored; to skip to the next note, briefly press the Voice button during playback and say **NEXT**.

## DELETING NOTES

To delete a single note, briefly press the Voice button during playback of the note and say **DELETE**.

To delete all stored notes, briefly press the Voice button and say **CLEAR NOTEPAD**.

## VOICE VOLUME

Briefly press the Voice button to initiate a Voice session, then use the volume control to adjust Voice volume as required.

**Note:** *Voice volume can also be adjusted in the Settings area of the touch screen.*