


## USING CRUISE CONTROL

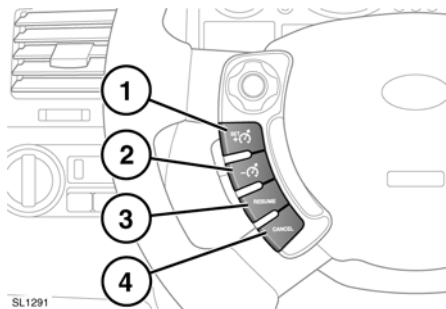

1. Set target speed, or increase speed.
2. Decrease set speed.
3. Resume set speed.
4. Suspends cruise control operation without erasing memorized speed.

**Note:** Cruise control is not available when using Hill Descent Control, when a Terrain Response special program has been selected or when Low range is in use.

**Note:** Do not use cruise control when driving off-road.

**Note:** Do not use cruise control with **SPORT** mode selected.

## SET OR INCREASE CRUISE SPEED



**WARNING:** The driver must always ensure that a safe speed is maintained within the speed limit, taking account of traffic and road conditions.



**CAUTION:** Do not use cruise control in traffic conditions where a constant road speed cannot be easily maintained, or on winding or slippery road surfaces.



**CAUTION:** When setting the cruise control to the speed limit, it is important to remember that it is possible for the vehicle speed to increase when travelling downhill. This may result in the vehicle speed exceeding the speed limit.

**Note:** Cruise control can be engaged only at speeds in excess of 20mph (32km/h).

Accelerate until the desired speed is reached, then press control **1**. This sets the vehicle speed into the system's memory. Cruise control will now maintain that speed.



The cruise control warning lamp will illuminate to confirm cruise control is operational.

Speed can still be increased using the accelerator pedal. As soon as the accelerator pedal is released, the vehicle speed will return to the set cruising speed.

**Note:** If the accelerator pedal is pressed for more than 5 minutes, cruise control will be cancelled.

To increase the set cruise speed, press and hold control **1**. Release the switch when the desired speed is reached, the new speed will be set and maintained.

The speed can be increased in steps of 1mph (2km/h), by briefly pressing control **1**.

Speed can also be increased using the accelerator. When the desired speed is reached press control **1** to set and maintain the new speed.

## DECREASING CRUISE SPEED

To reduce cruising speed, press and hold control **2**. Release the switch when the desired speed is reached, the new speed will be set and maintained.

The set speed can be decreased in steps of 1mph (2km/h), by briefly pressing control **2**.

## RESUMING AND SUSPENDING CRUISE CONTROL

To resume cruise control at the previous set speed, press control **3**.

Suspend with a single press of control **4**.

Cruise control will also be suspended if the brake pedal is pressed or the gear selector is moved to **N**.

**Note:** *The set speed can be erased only by switching off the ignition.*