


STEERING COLUMN

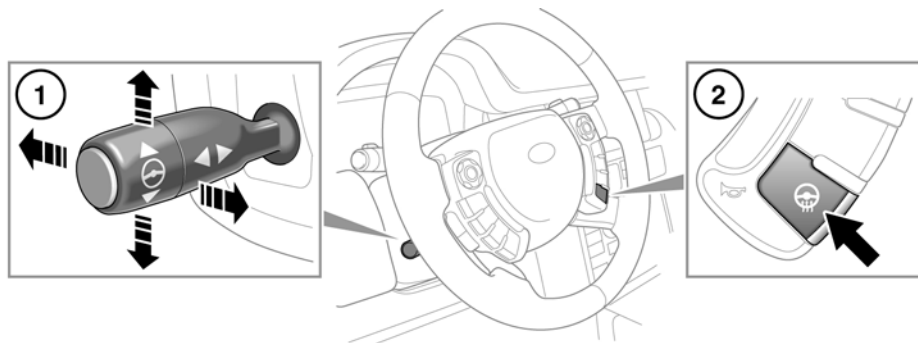

SL1198



WARNING: Never adjust the steering column while the vehicle is in motion. Doing so may cause a loss of control, potentially resulting in an accident.

1. **Steering column adjustment:** Move the control up or down to adjust the tilt/height. Move the control forwards or rearwards to adjust reach.

Note: The steering wheel position can be stored in the system's memory.

See, **DRIVING POSITION MEMORY, 16.**

2. **Heated steering wheel:** Press to operate. When switched on the temperature is thermostatically controlled.