



## DOOR BUTTONS AND LEVERS

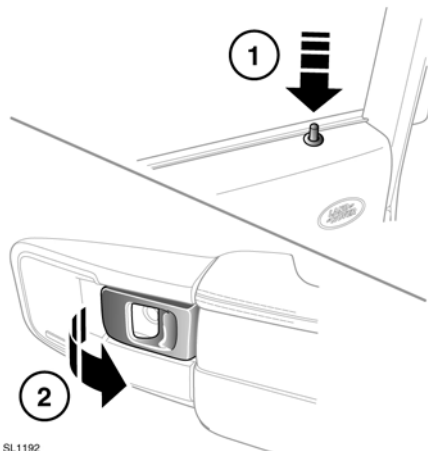

1. Press the button on the selected door to lock the door.
2. Pull the lever once to unlock the door; pull once more to open the door.

**Note:** If the vehicle was locked using the Smart Key, operating the interior door release lever will only unlock the door. If the door is opened the alarm will sound.

## MASTER LOCKING SWITCH

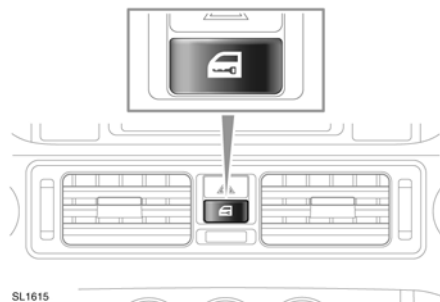

Press to lock or unlock all doors and luggage compartment.