


FUSE BOX LOCATIONS

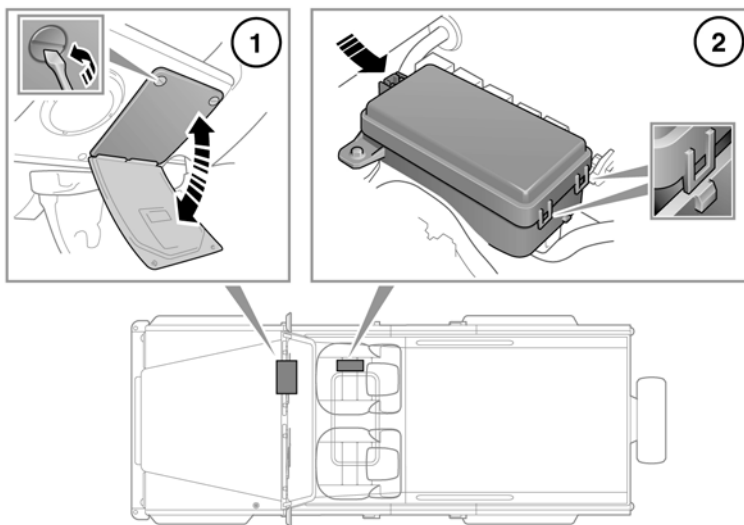

1. Main fuse box.
2. Secondary fuse box.

The fuse numbers and positions are shown on the inside of the fuse box cover.

CHANGING A FUSE

⚠ Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse may result in damage to the vehicle's electrical system, and can result in a fire.

⚠ If the replacement fuse blows after installation the system should be checked by your Land Rover Dealer/Authorised Repairer.

Note: Land Rover recommends that relays and screw down fusible links should be replaced only by qualified persons.

Always switch off the ignition and the affected electrical circuit before replacing a fuse.

MAIN FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F8	10	Red	Alarm system
F9	10	Red	Anti-lock brakes
F10	10	Red	Rear wipers/wash
F11	15	Blue	Front wipers/wash
F12	10	Red	Speed transducer
F13	15	Blue	Brake lamps
F14	10	Red	Reversing lamps
F15	5	Tan	Ignition
F16	-	-	Not used
F17	-	-	Not used
F18	10	Red	Side lamps -left
F19	10	Red	Side lamps-right
F20	10	Red	Illumination/clock illumination/headlamp levelling
F21	10	Red	Hazard switch
F22	10	Red	Headlamp dipped beam - right
F23	10	Red	Headlamp dipped beam - left
F24	10	Red	Headlamp main beam - right
F25	10	Red	Headlamp main beam - left
F26	10	Red	Rear fog lamps
F27	10	Red	Alarm sounder
F28	20	Yellow	Heated rear window
F29	20	Yellow	Cooling fan/A/C clutch link
F30	10	Red	Audio/instrument pack/clock/diagnostic socket
F31	15	Blue	Hazard warning switch
F32	-	-	Not used
F33	20	Yellow	Seat heater
F34	20	Yellow	Electric window - right
F35	20	Yellow	Electric window - left
F36	30	Green	Heated front screen

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F37	-	-	Not used
F38	10	Red	Engine ECU/PCM
F39	5	Tan	Engine ECU/PCM
F40	5	Tan	Engine ECU/PCM
F41	5	Tan	Engine ECU/PCM
F42	10	Red	Air conditioning switch
F43	20	Yellow	Cigar lighter
F44	5	Tan	Audio unit
F45	30	Green	Blower motor
F46	-	-	Not used
F47	-	-	Not used

SECONDARY FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F1	30	Green	ABS
F2	20	Yellow	Accessory socket
F3	20	Yellow	Headlamp flash/horn
F4	-	-	Not used
F5	30	Green	Engine ECU/PCM relay
F6	15	Blue	Alarm system
F7	20	Yellow	Alarm system