

DUAL VIEW

Dual view allows the front passenger to view TV or other video media on the touch screen, while the driver uses an alternative system (e.g. radio or navigation).

Note: *If the driver has selected an alternative audio source (e.g. radio), this will be heard over the vehicle speakers. The passenger will need to listen to the dual view source using the wireless headphones.*




Press this button (located below the touch screen) to activate dual view mode. Once dual view is active, the passenger should press this button to display/cancel the dual view controls menu.

Note: *The controls menu will also be displayed on the driver's view.*

Note: *Rear seat passengers may be able to see both views when dual view is active.*

DUAL VIEW CONTROLS

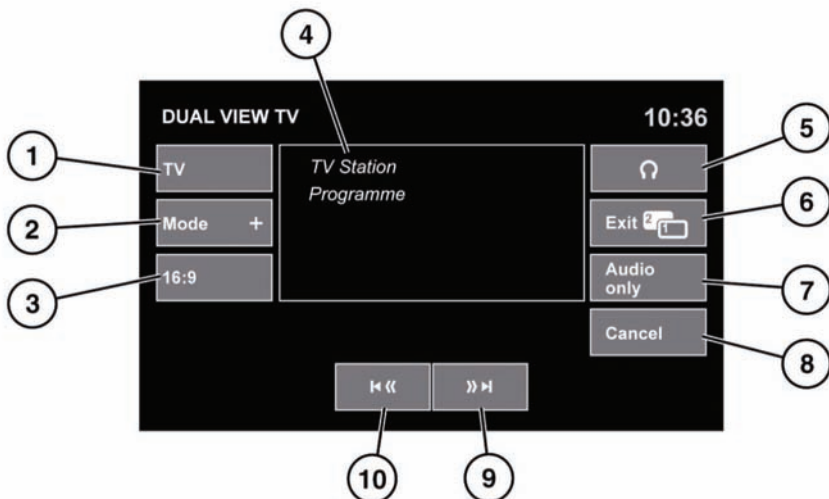

E135964

1. Select to cancel dual view and revert to the menu for the current video source (TV, DVD).

Note: The preview screen will be deactivated if the vehicle is moving.

2. Select to view a list of all available video sources. Touch the relevant soft key to select an alternative source. The controls menu for that source will then be displayed.
3. Select to change the picture format (4:3, Zoom, 16:9). The next available format is displayed on the soft key.
4. Information on the current video source (e.g. TV channel and programme name).
5. Select to switch the front passenger wireless headphone output on or off.
6. Select to cancel dual view: The touch screen reverts to the menu currently in use by the driver.

7. Select to retain audio for the video source while the display reverts to the menu currently in use by the driver.
8. Select to dismiss the dual view controls pop-up.
9. Seek up: Select to view the next channel on the channel list or the next track on CD or DVD.
10. Seek down: Select to view the previous channel on the channel list or the previous track on CD or DVD.

Note: If the chosen video media is CD or DVD, then a play/pause soft key is displayed between the Seek soft keys (9) and (10).