

## WARNING AND INFORMATION MESSAGES

### ⚠ WARNING

**Do not ignore warning messages, take appropriate action as soon as possible. Failure to do so may result in death or serious injury or serious damage to the vehicle.**

If more than one message is active, each is displayed in turn for 2 seconds in order of priority.

**Note:** The message center messages and their meanings, are detailed where necessary within the appropriate subject sections.

## TRIP COMPUTER

The computer memory stores data for a trip or series of trips until it is reset to zero.

The displayed information is for guidance only, as it can be affected by traffic, road and weather conditions.

Three independent memories are available, A, B and Auto. A and B memories can be reset independently, while the Auto trip will reset after every ignition cycle as the vehicle moves.

Trip computer information is displayed on the instrument panel.

## CHANGING THE DISPLAY



SL1778

Press the **TRIP** button on the end of the left column stalk repeatedly to display the trip data in the following order:

- Odometer.
- Trip distance.
- Average speed.
- Average fuel consumption.
- Instantaneous fuel economy.
- Range.
- Blank.

To reset the displayed trip data, press and hold the **TRIP** button.

## TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

## RANGE

This shows the predicted distance, miles or kilometres, that the vehicle should travel on the remaining fuel, assuming fuel consumption stay constant.

## UNITS

The display of imperial, mixed or metric units is selected via the instrument panel menu.

## SERVICE INTERVAL INDICATOR

The service interval message will only be displayed when the vehicle has less than 2000 miles (3200 km) before the service is due.

When the ignition is switched on, and the vehicle has started its service countdown, **SERVICE REQ'D XXXX km (XXXX MLS) / XX Days** is displayed in the message center.

## Message center

When the service distance has been reached, **SERVICE REQUIRED** is displayed in the message center.

### **NOTICE**

*If no service interval indicator is displayed during the vehicle service cycle, make sure that your vehicle is serviced in accordance with the intervals, as stated in the Passport to Service.*