


CONTROLS (FRONT TOUCH SCREEN)

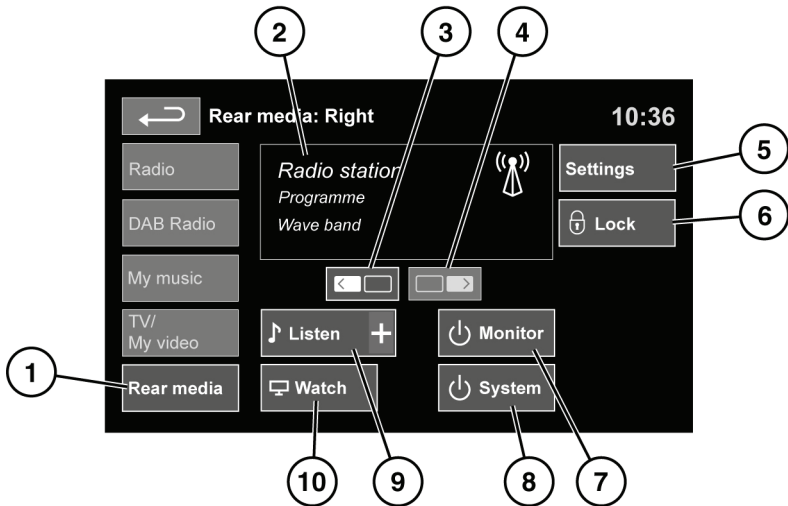

SL1870

See **106, TOUCH SCREEN HOME MENU.**

1. Select rear media.
2. Current rear media display.
3. Left screen select.
4. Right screen select.
5. Settings menu.
6. Remote control lock. Touch to prevent selections being made from the remote control.
7. Turns off the selected screen.
8. Turns off the selected system.
9. Audio source select.
10. Video source select.

USING RSE

The rear seat entertainment system consists of two screens. Separate programmes can be viewed or heard by rear seat occupants. Supervisory control is made from the front screen. Audio and video programmes for each or both sides of the rear media, can be selected from the Supervisor screen. The remote control can be locked out.

While the Supervisor screen is displayed, the remote control will be locked out.



The passenger entertainment system should be used only when it is safe to do so. Do not use if it is likely to cause driver distraction. Driver distraction can lead to accidents causing serious injury or death.



Always run the engine during prolonged use of the RSE system, otherwise, the vehicle battery may become discharged.

CONNECTING A VIDEO DEVICE

Inputs are provided for AV and USB 2.0 video media. See **127, CONNECTING A DEVICE**.

Video files must be recorded in the correct format. See DivX information **116, LICENSING**.

REAR MEDIA SETTINGS

The rear media settings screen allows

Limousine Mode and **TV Parental Control** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

TV Parental Control allows an age limit threshold to be set. If the content of a TV programme is unsuitable, a message is sent to the rear screen.

Note: When TV Parental Control is off the age limit slider is hidden.

Note: TV Parental Control is not available in all markets.

REAR MEDIA CONTROL FROM THE TOUCH SCREEN

To switch on a rear screen:

From the front touch screen, select **Left**, **Right** or both, as required.

Selecting an audio source:

Listen (9) will display a choice of audio sources: **Radio**, **DAB**, **CD**, **Stored CD**, **iPod**, **USB** and **AUX**.


Note: When watching a video source, an alternative audio source can be selected.

Selecting a video source:

Watch (10) will display a choice of video sources: **DVD**, **TV**, **USB** and **AV1**.

Note: When a new video source is selected, the audio source will always be synchronised. However, if an alternative audio source is subsequently selected, synchronisation can be achieved again with a long touch of the relevant **Audio** soft key.

TOUCH SCREEN REMOTE CONTROL

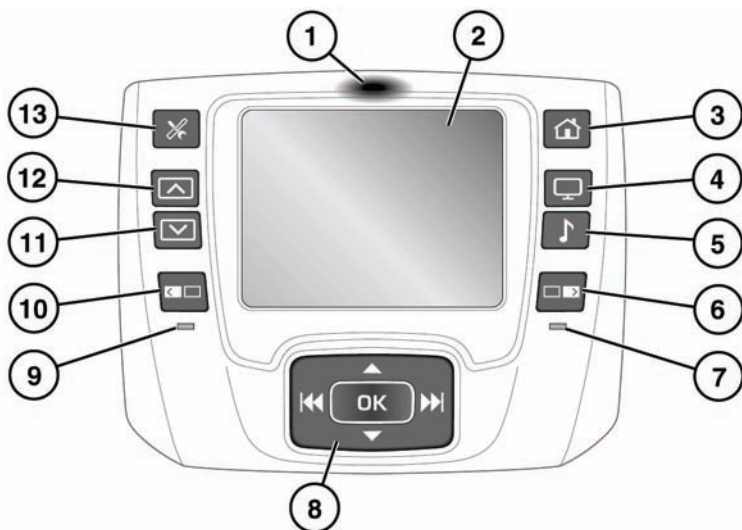

SL1871

1. Press here to undock remote control.



Do not press the touch screen to undock the remote control.

2. Touch screen.
3. Home screen.
4. Video source select.
5. Audio source select.
6. Right screen select.
7. Right screen tell-tale. (illuminates when right screen has been selected).
8. Cursor movement and option select buttons.
9. Left screen tell-tale. (illuminates when left screen has been selected).
10. Left screen select.
11. Screen brightness - decrease.
12. Screen brightness - increase.
13. RSE settings.

USING THE SYSTEM


The system is operated using the remote control.

To release the remote from the docked position, press at the top of the remote (1) to unlatch it.



Do not attempt to pull the remote control out of its docked position.

Rear seat entertainment

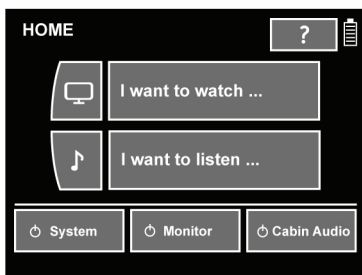

SL1872

Using the appropriate button **(6)** or **(10)** or on screen soft key (right or left) to select the required screen, will allow options to be set and selected.

Note: A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.



SL1873

HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

Press the channel selector button to cycle through available channels. Select the channel appropriate for the required screen.

Note: These headphones are not intended for use by the driver or outside the vehicle.

Note: The earpiece exteriors must remain exposed to the infra red transmitter in the overhead console. Any barrier will prevent them from working correctly.

When not in use, the headphones should be turned off.

REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery is not serviceable and should not be changed or removed by the user.