

VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands.
Select an **Information** button to view alternative function commands.
- **Voicetags:** View the categories. Select a category to manage the voicetags for the chosen system. See **102, VOICETAGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- **Preferences:** Select to alter the following settings:
 - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training program first.
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
 - **Voice feedback:** Select **On/Off**.
 - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.
Select **User 1** or **User 2** and follow the on screen and audible instructions. See **102, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **101, USING VOICE CONTROL**.

SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant. Valet mode prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

1. From the **Home** menu, select **Valet**.
2. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet on** is displayed to indicate that the PIN has been accepted.
4. **Valet mode activated** is displayed to indicate that the PIN has been accepted.

Valet mode On screen is displayed.

DESELECTING VALET MODE

1. When you re-enter the vehicle, select the Valet mode screen.
2. Enter your four digit PIN and touch the **OK** button.

Valet mode deactivated is displayed to indicate that your PIN has been accepted.

- The touch screen will be enabled.

Note: If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.