
## Fuel and refuelling

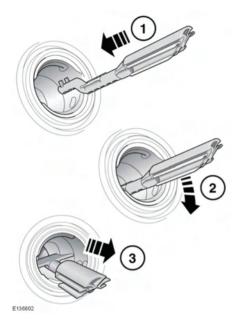

Reset the misfuel protection device as follows:

- Insert the reset tool (with the teeth uppermost) as far as it will go into the filler neck.
- 2. Locate the teeth by pushing down the top of the reset tool
- 3. With the top of the tool pressed down and the teeth engaged, slowly pull the tool out of the filler neck to reset the device.
- O not twist the device, once the teeth have engaged.

## **FUEL CONSUMPTION**

The fuel consumption figures shown below have been calculated using a standard testing procedure (the new EC test procedure from Directive 99/100/EC) and produced in accordance with The Passenger Car Fuel Consumption (Amendment) Order 1996.

**Note:** The diesel misfuelling protection device may not activate if an unleaded petrol nozzle is only partially inserted.

**Note:** The yellow part of the protection device should no longer be visible in the filler neck.

Return the reset tool to the luggage compartment.

## **FUEL TANK CAPACITY**

Avoid the risk of running out of fuel and never intentionally drive the vehicle when the fuel gauge indicates that the tank is empty. When refuelling your vehicle after the fuel gauge reads empty, you may not be able to add the fuel quantity shown below, as there will be a small reserve remaining in the tank.

Total tank capacity (usable):	
Petrol engines	70 litres (15.4 gallons)
Diesel engines	68 litres (15 gallons)

## **FUEL SPECIFICATION**

Petrol	Diesel
91-98 RON	EN 590



Diesel vehicles in Algeria, Egypt, Libya, Morocco, India, Pakistan and Tunisia must only use premium diesel fuel.