

6. Seek up: Select to view the next DVD chapter or previous chapter of the video media
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or previous chapter of the video media.

For information on the CD/DVD loading slot and the eject button, and the use of the audio/video controls on the audio unit and steering wheel, see **114, TOUCH SCREEN AUDIO/VIDEO CONTROLS**.

### DivX VIDEO ON DEMAND

DivX content is encrypted to ensure copyright protection. The content will play only on registered playback devices. See DivX information **116, LICENSING**.

When the registration process is complete, a DVD with DivX VOD content can be played.

After the first playing of DivX VOD content, a new registration code will be displayed. Do NOT use this code when purchasing DivX VOD content. Use only the original registration code.

If a DVD with DivX VOD content has a different registration code to your unique code, it will not be possible to play it. **Authorization Error** will be displayed on screen.

### FULL SCREEN VIEW CONTROLS

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

**Display format:** Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option.

### MY VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **My video** screen and the relevant safety message will be displayed.