

## EASY ROUTE

In **Route options**, **Easy route** can be turned **On** or **Off**.

When **On** is selected, **Easy route** changes the calculation parameters of **Route 3** in order to reduce:

- Intersections.
- Turns.
- Turns that cross traffic.
- The priority of minor roads.
- Complex intersections and maneuvers.

## LEARN ROUTE

In **Route options**, **Learn route** can be turned **On** or **Off**.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorize the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

## VOICE GUIDANCE

To turn voice guidance on or off but maintain route guidance, proceed as follows:

1. Touch **Nav menu** on the map menu screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when voice guidance is enabled.

## CANCEL ROUTE GUIDANCE

To cancel route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

## QUICK POI SELECTION

1. Touch the Map to display the additional options
2. Touch the **Point of interest** (POI) soft key.
3. The screen shows six suggested categories, 5 of which can be selected as quick points of interest.
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon, then touch **Set destination** to set and calculate route.
6. Touch **GO** to start trip.

## RESTORE SYSTEM DEFAULTS

If you have made any changes to the system's default settings, use this menu to restore the original settings.

## FAVORITES

This enables you to manage destinations such as, place of work, home, favorite restaurant.

From the favorites sub menu in stored locations, you can save up to 400 stored favorites.

Use favorites to add your home address as a stored favorite.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Favorite**.
4. To store a favorite, select **Add** from the submenu.
5. Select any destination entry method and confirm desired location.