

## SMART KEY TRANSMITTERS

### ⚠ WARNING

Any person fitted with an implanted medical device should be kept at a distance of at least 8.7 inches (22 cm) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device. Interference may cause the implanted medical device to malfunction, causing serious injury or death. For information concerning the location of the security system transmitters, see 203, SMART KEY TRANSMITTER LOCATIONS.

## VALET MODE DEACTIVATING

If Valet mode is active when you enter the vehicle, touch the **Valet** button to view the Valet mode screen.

Enter your 4 digit PIN and touch the **OK** button.

**Valet mode is deactivated** is displayed.

- The tailgate will return to the previously set security requirement.
- All touch screen functions are enabled.

See 17, **VALET MODE ACTIVATING**.

**Note:** If the PIN number is lost or forgotten, Valet mode can be deactivated only by your Retailer.


## OPERATING THE POWERED TAILGATE

### NOTICE

Ensure there is a minimum space of 39 in (1 m) above the rear of the vehicle before operating the tailgate. Insufficient space may result in damage to the vehicle.

### NOTICE

Do not operate the tailgate if a cycle rack is fitted to the tailgate. Remove any cycles and/or racks before operating the tailgate.

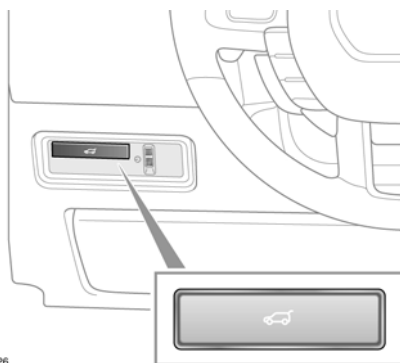

SL2326

The tailgate can be released using:


- the appropriate button on the Smart Key,
- the internal release switch,
- the external release switch on the tailgate.

Using any of these methods, the powered tailgate will open.

**Note:** The tailgate will not open if the vehicle is traveling at or above approximately 3 mph (5 km/h).

**Note:** When using the external release switch, all doors must be unlocked and the transmission in Park (**P**) position.

**Note:** If the Smart Key is inadvertently left inside the luggage compartment and the vehicle is locked and the alarm set, an audible warning will sound and the tailgate will re-open after 3 seconds.

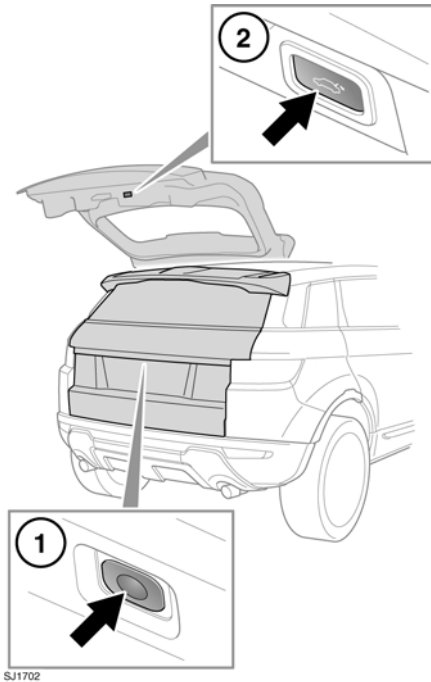

1. Press to open the powered tailgate.
2. Press and release to close the powered tailgate.

After the tailgate has opened to its set height, it can be manually raised or lowered. If the tailgate fails to open or close correctly, close it manually then press the tailgate release switch again.

As the closing tailgate reaches its lowest position, it will 'soft close' to the fully closed position. If the vehicle was previously locked, all doors will re-lock automatically to the previous locked state and the alarm will re-arm. The hazard warning lamps will flash to confirm the lock status. An audible confirmation may also be given.

**Note:** If a tailgate switch is pressed while the tailgate is opening or closing, all movement will stop. However, if a switch is pressed during the 'soft close' stage, the open request will be ignored.

### **⚠ WARNING**

Before operating the tailgate, ensure that anyone in the vicinity does not have any part of their body in a position where it could be trapped. Note that the 'soft close' action does not incorporate object detection. Death or serious injury could occur, even with an object detection system.

While the tailgate is open, the locking platform and latch are exposed. Do not manually close the latch as it may also automatically 'soft close' and trap items or body parts.

**Object detection while opening:** If an object is detected that would interfere with the tailgate opening, tailgate movement will stop. Remove any obstructions and press the tailgate switch again to open.

**Object detection while closing:** If an object is detected that would interfere with the tailgate closing, tailgate movement will stop and then reverse a short distance. An audible warning will be given to indicate a mislock. Remove any obstructions and press the tailgate switch again to close.