

## NOTICE

*When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.*

**Engine compartment** - fuse box access:

1. Remove the two plastic fixings.
2. Pull the tube up to release from the air box.
3. Delatch the tabs. The fuse box can now be opened.

The engine compartment fuse numbers and positions are shown on the inside of the fuse box cover.

**Passenger compartment** - fuse box access.

There are two covers.

4. To access the upper part, open the glovebox and remove the panel from the glovebox liner. A label on the panel shows the circuits protected and the fuse locations.
5. To access the lower part, remove the lower access panel.

**Luggage compartment** - fuse box access:

6. Remove the panel from the left side trim of the luggage compartment. A label on the panel shows the circuits protected and the fuse locations.

## CHANGING A FUSE

### NOTICE

*Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.*

### NOTICE

*If the replacement fuse blows after installation, the system should be checked by your Land Rover Retailer/Authorized Repairer.*

**Note:** Land Rover recommend that relays should only be replaced by qualified persons.

### NOTICE

*Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.*

The fuse removal tweezers are located in the passenger compartment fusebox. Press the tweezers onto the head of a fuse and pull to remove. A break in the wire inside the fuse indicates that the fuse has blown and must be replaced.

There are some spare replacement fuses in the passenger compartment fusebox. See the fuse box label for details.