

## HOMELINK<sup>®</sup> TRANSMITTER

### ⚠ CAUTION

Do not use the transceiver with any garage door opener that lacks the safety stop and reverse feature as required by safety standards.

### ⚠ CAUTION

When programing the transmitter to a garage door opener or entry gate, ensure the area is clear. This will prevent potential harm or damage as the gate or garage door will activate during the program.

### NOTICE

*This device may suffer from interference if operated in the vicinity of a mobile or fixed station transmitter. This interference is likely to affect the hand-held transmitter as well as the in-car transceiver.*

The HomeLink transceiver is located in the rear-view mirror. It can be programed to transmit the radio frequencies of up to three different transmitters, which can be used to operate garage doors, entry gates, home lighting, security systems or other radio frequency operated devices.

Although this section mainly describes the procedures for a garage door opener, it equally applies to the previously mentioned applications.


## BEFORE PROGRAMING

### NOTICE

*When programing a device that may require you to press and re-press the hand-held transmitter (cycle), unplug the device during the cycling process to prevent possible motor failure.*

For best results, fit a new battery to the hand-held transmitter of the garage door opener (or other device) before programing. If your garage door opener receiver (located in the garage) is equipped with an antenna, ensure that the antenna is hanging straight down.

## PROGRAMING

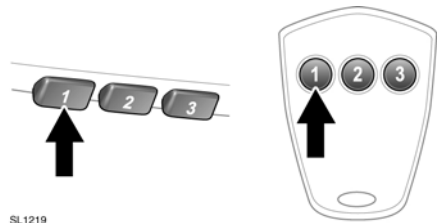

With the engine switched off;

1. Ensure that the ignition system is on.
2. Hold the signal emitting end of the original garage door opener hand-held transmitter 2 to 6 inches (50 to 150 mm) away from the HomeLink transceiver, keeping the indicator lamp in view.
3. Simultaneously press and hold both the chosen HomeLink button, as shown above, and the hand-held transmitter button. Keep both buttons pressed. The indicator lamp will flash slowly at first and then change to a fast flash. When the indicator lamp flashes rapidly, release both buttons. The rapid flashing lamp indicates successful programing.
4. If, after 60 seconds, the indicator lamp does not flash rapidly, release both the HomeLink and the hand-held transmitter buttons and repeat the procedure starting with Step 2. Position the hand-held transmitter at a different angle and/or distance.