

The set speed can be decreased in steps of 1 mph (2 km/h), by briefly pressing control (4).

SUSPENDING AND RESUMING THE CRUISE SPEED

Suspend cruise control with a single press of control (3).

To resume cruise control at the previous set speed, press control (2).

NOTICE

It is not recommended to resume set speed when a low gear is selected as excessive engine speeds will occur. (2) should be used only if the driver is aware of the set speed and intends to return to it.

AUTOMATIC SWITCH OFF

Cruise control will switch off but the set speed will remain in the memory when:

- The **CAN** button (3) is pressed.
- The brake pedal is pressed.
- Speed falls below 18mph (30km/h).
- Transmission **N**, **P** or **R** is selected.
- Dynamic Stability Control is operating.
- The difference between the actual and set speed is too great.
- The vehicle reaches a speed of 105 mph (170 km/h).
- The accelerator pedal is used to accelerate beyond the set speed for too long a period.

Cruise control will switch off and clear the memory when:

- The ignition is switched off.
- A fault occurs. The cruise control system will switch off and cannot be used until the fault is cleared.