

6. Rear interior/reading lamps. Illuminate when the doors are unlocked and extinguishes 60 seconds after all doors are closed, when the engine starts or when the vehicle is locked. Press the switch to switch on and off manually. Touch the front courtesy lamp lens for approximately 2 seconds to deactivate/activate automatic illumination of the rear interior lamps.
7. Luggage compartment lamp. Illuminates when the tailgate is opened.

### INTERIOR LIGHTS INTENSITY

While the exterior lamps are turned on, intensity of interior lights can be adjusted. See **244, CONTROLS**, Interior illumination control.

### INTERIOR AMBIENT LIGHTING

The LED ambient lighting can be adjusted for color and intensity via the touch screen. The exterior lamps must be turned on while changes are being made via the touch screen. See **TOUCH SCREEN HOME MENU**, Extra features.