

**To close the blind:** Push from the front of the switch to the first position and release. The blind will fully close.

A further press will stop movement of the blind.

Alternatively, push from the front of the switch to the second position and hold until the blind reaches the desired position, then release.

## WINDOW RESET

If the battery is disconnected or the power supply is interrupted, the windows must be reset.

Once the power supply is restored, reset as follows:

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for 1 second.
3. Repeat the procedure on each window.

## WINDOWS ANTI-TRAP PROTECTION

### WARNING

**Closing a window or roof blind onto any part of the body can result in serious injury.**

### WARNING

**Before closing a window or the roof blind, ensure that no occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system, death or serious injury could occur.**

Anti-trap protection will stop window or roof blind movement if an obstruction or resistance is detected. Check the window or roof blind and its aperture and remove any obstructions (e.g. ice, etc.).

If it is still necessary to raise the window, the override procedure is as follows:

1. Attempt to close the window, anti-trap will prevent closure and lower the window slightly.
2. Within ten seconds attempt to raise the window again, anti-trap will prevent closure and lower the window slightly.
3. Attempt to close the window for a third time, this time hold the switch in the close position. Hold until closed.

**Note:** *If this procedure fails to remove the blockage, the window operation may need to be reset.*

## RESONANCE WITH LOWERED WINDOWS

if a resonance or booming sound occurs when a rear window is open, lowering an adjacent front window by approximately 1 inch (25mm) will eliminate the condition.