

STARTING THE ENGINE

⚠ WARNING

Never start the engine and leave it running when the vehicle is in an enclosed space. Exhaust gasses are poisonous and can cause unconsciousness and death if inhaled.

NOTICE

If the engine fails to start, do not continue cranking as this will discharge the battery. It may also damage the catalytic convertor due to unburnt fuel passing through the exhaust.

Note: The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including laptop bag), games console etc. Keep the Smart Key clear of such devices when attempting Keyless entry or Keyless starting.

To start the engine.

1. Ensure that a valid Smart Key is inside the vehicle.
2. Ensure that Park (P) or Neutral (N) is selected.
3. Firmly depress the brake pedal.
4. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released if it safe to do so.

SWITCHING OFF THE ENGINE

While the vehicle is stationary:

1. Ensure that the vehicle is parked with Park (P) selected and the parking brake applied.
2. Press and release the engine **START/STOP** button.

While the vehicle is moving:

NOTICE

It is not advisable to switch off the engine while the vehicle is moving. However, if a situation arises where engine switch off is urgent, the following procedure applies:

1. Press and hold the engine **START/STOP** button for 2 seconds, or
2. Press and release the engine **START/STOP** button twice within 2 seconds. With either method, **Engine Stop Button Pressed** is displayed in the Message center.

SWITCHING ON THE IGNITION



E140208

Starting the engine

To switch on the ignition without starting the engine.

1. Ensure the brake pedal is not depressed and that a valid Smart Key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Release the engine **START/STOP** button.

NOTICE

*If the brake pedal is applied when the engine **START/STOP** button is pressed, the engine will start.*

ROLLING RE-START

A rolling restart can be initiated by selecting Neutral (N) and pressing the engine **START/STOP** button.

KEYLESS START BACKUP

If the vehicle has been unlocked using the emergency key blade or the Smart Key is not detected by the vehicle, it will be necessary to use the keyless start backup to disarm the alarm and start the engine.

The keyless start backup can only be used when the message **Smart Key Not Found - Refer to Handbook** is displayed in the Message center.



E140293

1. Position the Smart Key flat against the side of the steering column with the buttons facing outwards.

Note: *The steering column has markings on the side to aid placement of the Smart Key.*

2. Firmly depress the brake pedal.
3. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released if it is safe to do so.

If the Smart Key is not recognized, or the engine still fails to start, consult a Land Rover Retailer/Authorized Repairer.

IF THE ENGINE FAILS TO START

Note: *If the engine fails to crank when the engine **START/STOP** button is pressed and there has been a recent collision, the fuel system inertia switch may have been tripped. Seek qualified assistance.*

Make sure that the brake pedal is not depressed. Switch on the ignition (see **101, SWITCHING ON THE IGNITION**) and check the instrument panel for warning lights and the Message center for warning messages (see **72, INSTRUMENT PANEL**). Seek qualified assistance if necessary.

Switch off the ignition.

To reset the immobiliser and alarm system use a valid Smart Key to lock and unlock the vehicle (see **9, UNLOCKING THE VEHICLE**).

Note: *The following information applies to gasoline engine vehicles only.*

If the engine persistently fails to start.

1. Make sure that a valid Smart Key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Firmly depress the brake pedal.
4. Ensure that Park (**P**) or Neutral (**N**) is selected.
5. Slowly depress the accelerator pedal fully and hold it in the fully depressed position.
6. Press and release the engine **START/STOP** button. The engine will begin to crank.
7. Release the accelerator pedal when the engine starts.

Once the engine has started, the brake pedal can be released if it safe to do so.

If the engine still fails to crank or start, consult a Land Rover Dealer/Authorized Repairer.