

### WARNING LAMPS AND INDICATORS

RED warning lamps are for primary warnings. A primary warning must be investigated immediately by the driver or qualified assistance before continuing.

AMBER and YELLOW warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation, others indicate that the driver must take action and then seek qualified assistance as soon as possible.

GREEN and BLUE lamps within the instrument panel indicate system status.

### LAMP CHECK

A bulb check is initiated for some warning lamps when the ignition is switched on and lasts for 3 seconds (except for the air bag warning lamp which remains illuminated until the engine is started). If any warning lamp remains on after this period, investigate the cause before driving.

Some warning lamps have associated messages, displayed in the Message center.

**Note:** *Not all warning lamps are included in the check (e.g. high beam headlamps and turn signals).*

**Note:** *If a trailer with LED lights is connected to the trailer socket, the bulb check may not be performed.*

### CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the Message center.

### GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the Message center.

### ENGINE TEMPERATURE (RED)



Illuminates when the engine temperature is too high. The Message center will also display the message ENGINE OVERHEATING.

Stop the vehicle as soon as safety permits and seek qualified assistance before continuing.

### LOW OIL PRESSURE (RED)



If the lamp flashes or illuminates while driving, stop the vehicle as soon as safety permits and switch off the engine immediately. Seek qualified assistance before continuing.

### BRAKE (RED)



USA.



Canada.

Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system.

## Warning lamps

Stop the vehicle as soon as safety permits and check and top-up the brake fluid, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

### PARKING BRAKE (RED)



USA.



Canada.

Illuminates when the parking brake is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

### BATTERY CHARGE (RED)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on or illuminates while driving, there is a fault with the battery charging system. Seek qualified assistance urgently.

### SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt is buckled.

**Note:** Objects on the front passenger seat may activate the seat belt reminder. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See **31, USING THE SEAT BELTS**.

### ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates when the engine is running, there is an emissions related fault with the engine or transmission. The vehicle can be driven but may enter limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

### BRAKE (AMBER)



USA.



Canada.

Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

### DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, it will remain illuminated and the Message center will display **DSC NOT AVAILABLE**. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

### **DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)**



Illuminates when DSC is switched off. A chime will sound and the Message center will display DSC OFF.

### **ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)**



Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

### **AIR BAG (AMBER)**



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the air bag system. Seek qualified assistance as soon as possible.

### **ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)**



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

### **REAR FOG LAMP (AMBER)**



Illuminates when the rear fog lamps are switched on.

### **LOW FUEL WARNING (AMBER)**



Illuminates when the remaining fuel is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.

### **AUTOMATIC SPEED LIMITER (AMBER)**



Illuminates when Automatic Speed Limiter is active.

### **FOLLOW MODE (AMBER)**



Illuminates when the Adaptive cruise control system is in follow mode.

### **EXTERNAL TEMPERATURE (AMBER)**



Illuminates when the external temperature is low enough that ice may be present on the road.

## Warning lamps

### TIRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message center, to warn that 1 or more tires are significantly under-inflated. Stop the vehicle as soon as possible, check the tire pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

### HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

### FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

### SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

### HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.

### TURN SIGNALS (GREEN)



The appropriate warning lamp will flash when the column stalk is moved up or down to signal a turn. If a direction indicator bulb fails, the audible ticking and warning lamp will sound and flash at twice the normal rate, when that direction indicator is selected.

### HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

### LOW RANGE (GREEN)



Illuminates when Low range has been selected.

### CRUISE CONTROL (GREEN)



Illuminates when cruise control or Adaptive cruise control is active.

### FORWARD ALERT (GREEN)



Illuminates when Forward alert is active

### TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the turn signal warning lamp. If the lamp fails to flash, the turn signal indicator bulb on the trailer may be faulty.

**Note:** *If the attached and connected trailer is fitted with LED lights, the bulb check may not be performed.*