


ELECTRIC WINDOWS

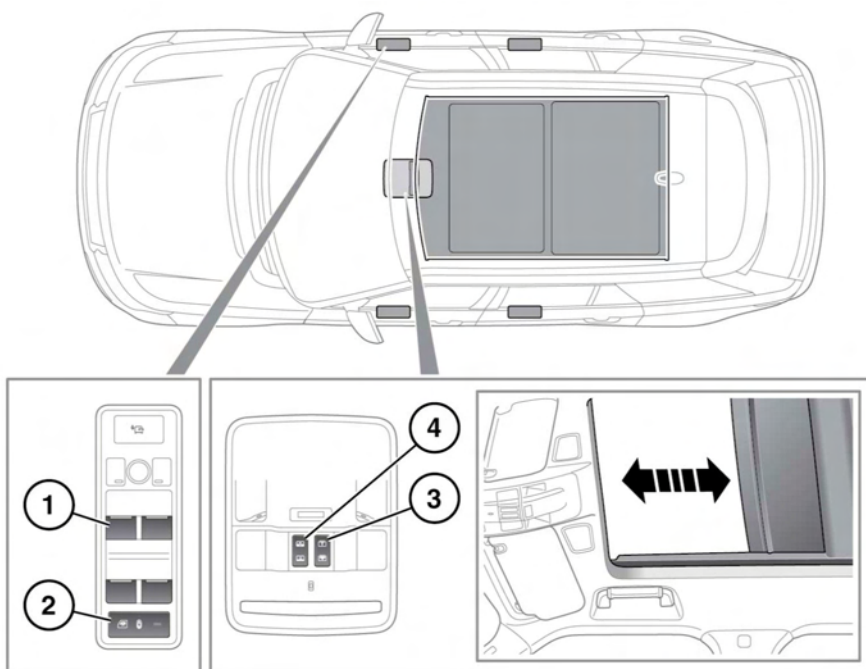

5149604

1. Window switches:

- To open a window: Press lightly at the front of the switch and release.
- To close a window: Pull-up lightly at the front of the switch and release.
- 1 touch open and close, press or pull firmly at the front of the switch and release.

Note: The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

2. Rear window isolator button.

Note: This will also isolate rear seat adjustment.

⚠ WARNING

If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.

3. Panoramic roof blind switch:

- To open the blind: Press lightly at the rear of the switch and release.
- To close the blind: Press lightly at the front of the switch and release.
- 1 touch open and close, press firmly at the front or rear of the switch and release.

4. Panoramic roof switch:

NOTICE

Wherever possible remove any snow, ice, dirt, and leaves etc. from the panoramic roof mechanism before closing. Failure to do so may damage the panoramic roof mechanism.

- Press lightly at the rear of the switch to tilt the roof. Once tilted, lightly press again to open the roof.
- From the fully open position, press lightly at the front of the switch to close to the tilt position, then press lightly again to close fully.
- 1 touch open and close, press firmly at the front or rear of the switch and release.

Note: The panoramic roof will operate for 30 seconds after the ignition is turned off, provided that a front door is not opened.

WINDOW ANTI-TRAP PROTECTION

⚠ WARNING

Before closing a window or the sunroof, ensure that no occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system, death or serious injury could occur.

⚠ WARNING

The anti-trap mechanism does not operate when closing the sunroof from the tilted position. The sunroof can cause serious injury should a body part become trapped. Always ensure that the sunroof is free from obstructions before closing.

Anti-trap protection will stop window or sunroof movement if an obstruction or resistance is detected. Check the window or sunroof and its aperture and remove any obstructions (e.g. ice, etc.).

If it is still necessary to raise the window or close the sunroof, the override procedure is as follows:

1. Attempt to close the window/sunroof, anti-trap will prevent closure and lower the window/open the sunroof slightly.
2. Within 10 seconds attempt to raise the window/close the sunroof again, anti-trap will prevent closure and lower the window/open the sunroof slightly.
3. Attempt to close the window/sunroof for a third time, this time hold the switch in the close position. Hold until closed.

Note: If this procedure fails to remove the blockage, the window operation may need to be reset. See **196, WINDOW RESET**.

Note: The sunroof anti-trap mechanism works differently and does not require reset if activated. See **196, SUNROOF RESET**.

SOLAR ATTENUATING GLASS

This type of windshield filters sunlight passing through a special laminated layer. Electronic actuating cards such as toll road pay cards can be fixed at a dedicated location on the inside of the windshield. If a card is located at any other part of the windshield, electronic scanners may not recognise it.

The fixing location is at the top of the screen to the left of the rear view mirror. The graphic is looking at the windshield from inside the vehicle.

