

Serious engine damage can occur if the vehicle is driven while the engine is overheating.

If the temperature gauge pointer moves into the red section at the top of the scale, the engine is overheating. Stop the vehicle as soon as safety permits and allow the engine to idle until the temperature reduces. If the temperature does not reduce after several minutes, switch off the engine and allow to cool. If the problem persists, seek qualified assistance immediately.

Note: If engine overheating occurs, there may be a noticeable reduction in engine power and the air conditioning may cease operation. This is a normal operating strategy, to reduce load on the engine and assist with cooling.

INSTRUMENT PANEL MENU





E138989

A number of vehicle features and display settings may be configured via the instrument panel menu.

To display and navigate through the instrument panel menu, operate the menu control on the steering wheel.

- 1. Steering wheel menu control.
- 2. Close and return to main menu.
- **3.** Access the vehicle driving features menu.
- 4. Access the trip computer menu.
- 5. Access the instrument display menu.
- 6. Access the vehicle set-up menu.
- Access the vehicle service menu. *Note:* Only available before the engine starts.

Digital Speedometer

A digital speedometer is available in some markets. Depending on market specification, the driver may choose to turn the digital speedometer on or off, or change the units from imperial to metric. The digital speedometer can be accessed through the **Digital speedometer** option in the instrument panel menu.

WARNING AND INFORMATION MESSAGES



Do not ignore warning messages, take appropriate action as soon as possible. Failure to do so may result in serious damage to the vehicle.

For information regarding the individual messages, their meanings, and any action required, please refer to the relevant section within this handbook.

If more than 1 message is active, each is displayed in turn for 2 seconds in order of priority.