


## ELECTRIC WINDOWS

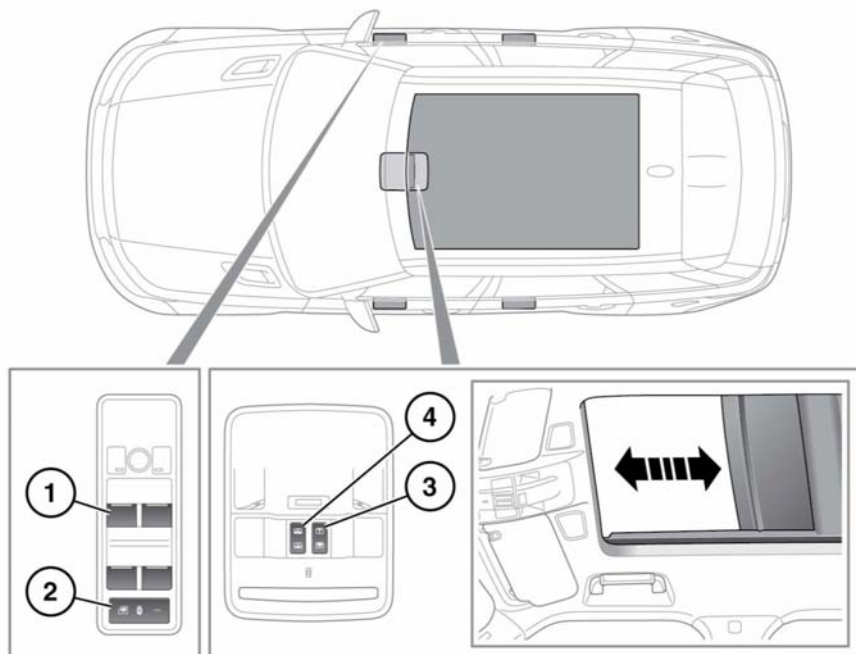

E150832

### 1. Window switches:

- To open a window: Press lightly at the front of the switch and release.
- To close a window: Pull up lightly at the front of the switch and release.
- One touch open and close; Press or pull firmly at the front of the switch and release.

**Note:** The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

### 2. Rear window isolator button.

**Note:** This will also isolate rear seat adjustment.



**If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.**



To prevent accidental operation, never leave the Smart key in the vehicle if children or animals are also left in the vehicle.

### 3. Panoramic roof blind switch:

- To open the blind: Press lightly at the rear of the switch and release.

- To close the blind: Press lightly at the front of the switch and release.
- One touch open and close; Press firmly at the front or rear of the switch and release.

#### 4. Panoramic roof switch:



Wherever possible, remove any snow, ice, dirt, and leaves etc. from the panoramic roof mechanism before closing. Failure to do so may damage the panoramic roof mechanism.

- Press lightly at the rear of the switch to tilt the roof. Once tilted, lightly press again to open the roof.
- From the fully open position, press lightly at the front of the switch to close to the tilt position and then press lightly again to close fully.
- One touch open and close; Press firmly at the front or rear of the switch and release.

**Note:** The panoramic roof will operate for 30 seconds after the ignition is turned off, provided that a front door is not opened.

If it is still necessary to raise the window or close the sunroof, the override procedure is as follows:

1. Attempt to close the window/sunroof, anti-trap will prevent closure and lower the window/open the sunroof slightly.
2. Within ten seconds attempt to raise the window/close the sunroof again, anti-trap will prevent closure and lower the window/open the sunroof slightly.
3. Attempt to close the window/sunroof for a third time, this time hold the switch in the close position. Hold until closed.

**Note:** If this procedure fails to remove the blockage, the window operation may need to be reset. See **210, WINDOW RESET**.

**Note:** The sunroof anti-trap mechanism works differently and does not require reset if activated. See **210, SUNROOF RESET**.

## ANTI-TRAP PROTECTION



**Before closing a window or the sunroof, make sure no occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system death or serious injury could occur.**

Anti-trap protection will stop window or sunroof movement if an obstruction or resistance is detected. Check the window or sunroof and its aperture and remove any obstructions (e.g. ice, etc.).