



Climate control *See page 2, item 21*

Illustrated controls may differ, dependent on specification.

Automatic system

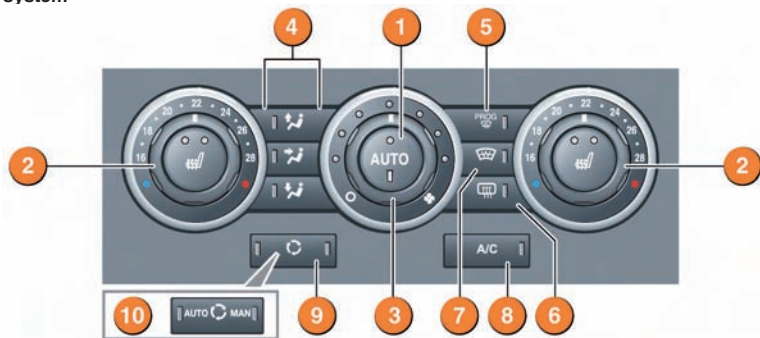

Manual system

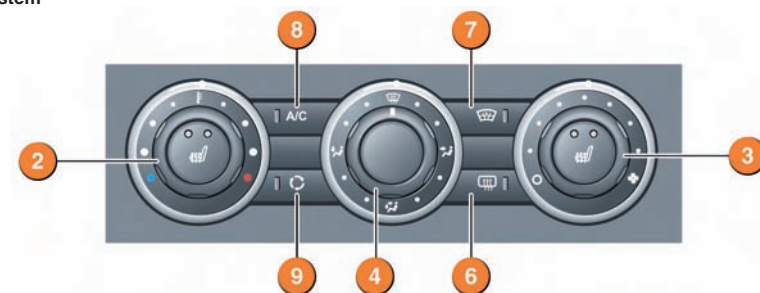

1. AUTO mode.

AUTO is the recommended operating mode. Press for automatic operation of the Climate control system.

The system will adjust the air conditioning, blower speed, air intake, and airflow distribution to maintain the selected temperature(s) and reduce misting without constant manual adjustments.

2. Temperature controls.

Rotate the controls to set the required temperature.

Operating note

The automatic system allows a temperature differential of up to 4°C (7°F) between the left and right passenger areas.

3. Blower control.

Rotate clockwise to increase and counter-clockwise to decrease airflow from the vents.

4. Air distribution system.

- Front screen and side window vents.
- Face level.
- Foot level.

The automatic system allows more than one setting to be selected at once.

5. Maximum defrost program.

Select to remove frost or heavy misting from the front and rear screens.

6. Heated rear screen.

7. Heated front screen.

8. Air conditioning on/off.

9. Recirculation on/off.

10. Air quality sensing. Press repeatedly to cycle through the options: Automatic, Manual, and Off.

External water deposits

The air conditioning system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.

Engine start/stop *See page 2, item 7.*

The **START/STOP** button is operational only when the Smart key is inside the vehicle.

Ignition only on

1. Press once to switch on the ignition.
2. Press again to switch off.

Engine start

1. The gear selector must be in **P** or **N** position.
2. For automatic transmission, press the foot brake. For manual transmission, press the clutch pedal.
3. Now press and release the **START/STOP** button.

To stop the engine, press the button again.

Diesel engine starting

In extreme low temperatures, there may be a delay of up to 12 seconds between the **START/STOP** button being pressed and the engine cranking.

Make sure that the foot brake or clutch remains pressed. **DO NOT** press the **START/STOP** button again. Cranking time will be increased.

Operating note

The **START/STOP** button must be pressed to stop the engine. If not, it will continue to run, even if the Smart key is removed from the vehicle.

Intelligent stop/start *See page 2, item 22.*

Intelligent stop/start will become active as soon as the engine is turned on.

When the vehicle comes to a stop, transmission **N** is selected and the clutch is fully released, the engine will turn off (unless it is required to support other systems).

A green **ECO** icon will illuminate in the Instrument panel. When the clutch is next pressed, the engine will restart.

Operating note

When the vehicle comes to a stop, make sure that your feet do not touch the clutch or accelerator pedals. Inadvertent pressure will prevent the engine from stopping.

Intelligent stop/start is not available while a Terrain response program is active.

To switch off, press the Intelligent stop/start switch.

The green **ECO** icon will extinguish while Intelligent stop/start is deactivated.



Operating note


There are some operating conditions where automatic stop and subsequent restart is prevented.

Also, the engine may restart automatically if vehicle systems require it, for example, if demand on the Climate control system increases.

These conditions are explained fully in the Owner's Handbook.

Cruise control *See page 2, item 18.*

1. Press to activate Cruise control and to set a speed. Press briefly to increase the speed in 2 km/h (1 mph) steps.
2. Press to resume the previous set speed retained in memory. Set speeds are cleared at ignition off.
3. Press to suspend Cruise control but retain the set speed in memory.
4. Press and hold to decrease the set speed. Press briefly to decrease the speed in 2 km/h (1 mph) steps.

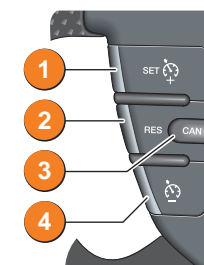


Cruise control override

Cruise control will disengage if the brake or clutch pedal is pressed, or when the vehicle's speed falls below 30 km/h (18 mph).

Warning and information lamps

The following lamps may illuminate in the Instrument panel during normal driving to indicate that a related system or feature is operating. If any other warning lamp illuminates, refer to the Owner's Handbook. DO NOT ignore warning lamps.

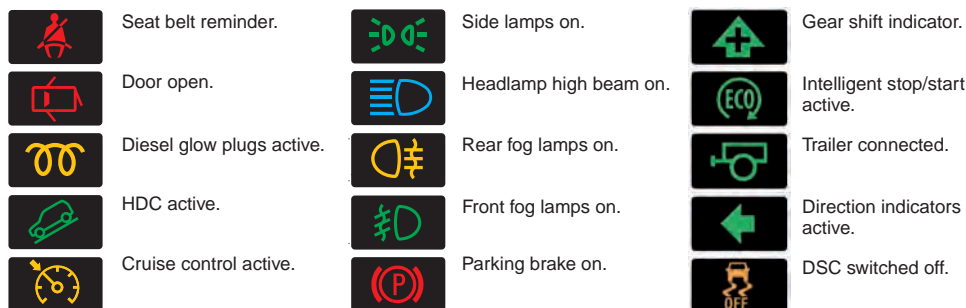Exterior lights *See page 2, item 8.*

- Outer collar.** First position for side lamps, second position for headlamps and the third position for **AUTO**. With **AUTO** selected, all exterior lamps will switch on automatically when ambient light fades.
- Inner collar.** Turn it away and release for front fog lamps. Turn it towards you and release for rear fog lamps. Turn and release again to turn off.

Headlamps high beam. Push the control forwards for high beam. To flash the headlamps, pull back and release.

Wipers and washers *See page 2, item 12.*

- With Automatic rain sensing, the front wipers will respond to rain severity. Without Automatic rain sensing, move up to select intermittent delay.
- With Automatic rain sensing, rotate towards **MAX** to increase sensitivity. Without Automatic rain sensing, rotate towards **MAX** to increase frequency of intermittent wipers.
- Low speed continuous wipe.
- High speed continuous wipe.
- Windscreen single wipe.
- Windscreen wash/wipe.
- Rotate to **INT** for rear screen intermittent wipe. Frequency increases with vehicle speed. Rotate to **ON** for continuous wipe.
- Rear wash/wipe. Continue to hold for additional operation.

If freezing conditions are likely, the wipers can be set to a higher position so that they can be lifted from the screen. See **Instrument panel menu**.



- To prevent inadvertent wiper activation, turn the Automatic rain sensing off;
- Before entering an automatic car wash.
 - During hot, dry and dusty periods.

Parking aids *See page 2, item 5.*

Front and rear Parking aids are activated when transmission **R** is selected. When a forward gear is subsequently selected, the Parking aids system will remain active until the vehicle's forward speed exceeds 16 km/h (10 mph).

If an obstruction is detected, an intermittent tone will sound. Moving closer to the obstruction will increase the frequency of the tone.

Press the switch to deactivate.




Rear camera

When transmission **R** is selected, the camera provides a rear-view image with overlaid guidelines, to assist while reversing.

To view the Parking aid display instead, or to cancel the camera display at any time, briefly touch the display.

- Broken line - full width of the vehicle.
- Solid line - projected reversing path based on the current steering wheel position.
- Shade - area required for tailgate access.
- Parking sensors activated.
- User options. Touch one of the mini views to select overlay options.

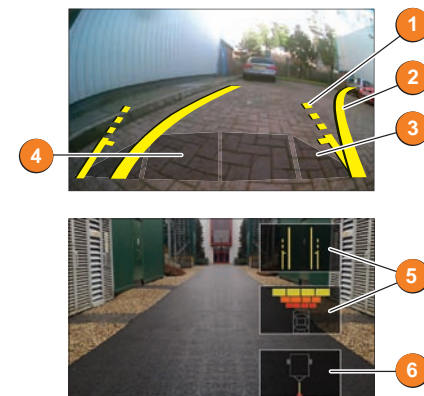

- Broken line - full width of the vehicle.
- Solid line - projected reversing path based on the current steering wheel position.
- Shade - area required for tailgate access.
- Parking sensors activated.
- User options. Touch one of the mini views to select overlay options.
- Hitch assist. To aid the process of guiding the vehicle to the trailer tow hitch, a single line is displayed as the reversing guideline. As the vehicle closes to within 0.6 m (23 in) of the tow hitch, an automated zoom is operated.

Sunroof



To fully open and close

- Press and release the switch to fully open.
- Press and release the switch to fully close.

To tilt from closed position

Press and release switch **2** to open to the tilt position. Press and release switch **1** to fully close. Stop movement by pressing the switch **1** again.


Operating note

The sunroof will operate for 30 seconds after the ignition has been switched off, as long as the front doors remain closed.

The sunroof switch must be pressed until the roof reaches the desired position.

Hill descent control (HDC) *See page 2, item 25.*

HDC allows greater downhill control, particularly when descending severe off-road gradients.

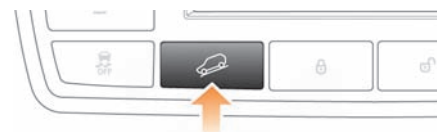

Press the HDC switch. HDC can be selected at speeds of below 80km/h (50mph) but will not be fully active until the

vehicle's speed is below 50km/h (30mph).

The Cruise control increase and decrease speed can be used to adjust descent speed.



A continuously illuminated indicator in the Instrument panel confirms HDC selection. Press the switch again to deselect HDC.