Nav menu

ND

4

N

4

----Nav menu: 1 of 2 Nav (1)) 17:40 11 Pa (1)Dectination Previous **Display POI Route voice** destination quidance entry Cancel Return to Detour guidance map

1. Use to enter a new destination. Provides a choice of options when entering a destination.

2. Displays previous destinations entered. Previous destinations can be selected.

3. Turns the POI (Point Of Interest) icons on the map on/off.

4. Only visible when a destination is set. Enables the last voice instruction to be repeated.

5. Highlighted while Route voice guidance is enabled. Touch to turn Route voice guidance off.

6. POI shortcuts: Touch the relevant icon to list available POIs that are close to the vehicle's position.

Calculates a detour from the current route.

8. Advances to the main map screen.

Move to the other Navigation menu. There are 2 navigation menu screens. On the second screen: Stored locations is used to manage the stored data. TMC (Traffic message channel) will provide data about road conditions and any events that may affect the current route.

Route options allows the selection of various options for the route.

Nav set-up is for setting personal preferences within the Navigation system. Use the More... soft key to toggle between them.

9. Cancels the current route guidance.

Selecting navigation

When navigation is selected after the ignition is turned on, a caution screen is displayed. Touch Agree.

Note: At the first time of accessing the caution screen set the required language.

Setting a destination

Select Destination entry

Select Address and enter address details using the keyboard. As each part of the address is refined, touch OK or List to display all of the streets and towns that are available to be selected. If the house number is not known, press OK. The end of the road is then used as the destination.

When the map screen is displayed, you have the option to Review route or GO. Touch GO to calculate the quick route and start guidance.

Review route

There will be a choice of 3 routes or Change route.

3 routes will display 3 different route options on the map. Select Route 1, 2 or 3 by touching the respective box displayed on the right side of the map and then select GO

Alternatively, select Change route and then Route preferences to alter the route settings. When changes are complete, touch GO.

Telephone

Telephone

Bluetooth® wireless technology device

For the latest list of compatible phones and their software, refer to www.landrover.com, Select OWNERS and then Bluetooth

Note: The process of pairing and connecting a phone to the vehicle will vary depending on the type of phone used. Use the manufacturer's instructions.

Connection must be made with the ignition on or the enaine runnina.

Pairing and connecting using the phone

1. Switch the ignition on and make sure that the Touch screen is active.

2. From the Home menu select Phone

3. A menu will appear. If no phone is connected, select Search new, otherwise select Change phone and then select Search new.

4. Select the Device to vehicle option.

Note: The vehicle's Bluetooth wireless technology system is discoverable for only 3 minutes.

5. Using the phone, search for Bluetooth wireless technology devices. On some phones, this is referred to as new paired device. See the manufacturer's instructions

6. When the vehicle's system is discovered, begin the pairing process and follow the on-screen instructions.

7. When requested, enter a PIN of your choice into the phone and the vehicle's system.

8. Once your phone is paired, it may automatically connect to the vehicle's system. If not, use the device list shown on the Touch screen, or use the phone.

Note: Some phones require the pairing to be set as 'authorised' or 'trusted' in order to automatically connect. Please refer to your phone's operating instructions for further information.

Downloading phonebook entries

When a phone with phonebook download capability is paired and docked, its phonebook directory can be automatically downloaded to the vehicle's system.

See PHONEBOOK in the Owner's Handbook for more information.

Phone 10:36 Name 00:05 Sattings init Di 01234587890 6 1 00 ast 10 9 9997 Use handse TIN Change

Calls via the Touch screen

With a paired and active phone, press the PHONE button on the Touch screen surround

1. Select Digit dial. Phonebook or Last 10. With Digit dial selected, use the keypad to enter the number. With **Phonebook** selected, choose a number from the downloaded phonebook. Last 10 displays the previous 10 calls. Choose one to dial.

2. Touch the green connect icon to make a call. The icon will change to a connected call icon. Touch the red icon to end a call.

Calls via the steering wheel controls

See page 2. item 9 and 15.

nhone



Disconnect. Use to end or reject a call.



Voice control talk button. The screen will display available options. Sav Phone and follow the instructions.

The left side steering wheel audio controls can be used to adjust the telephone's volume and to scroll through phonebook entries.



15

ZD

Delete

N