

## Radio



1. Touch to view and select a waveband.
2. Seek down: Short touch to auto seek down to the next radio station. Long touch to activate manual seek mode.

3. Information from the current station.
4. Seek up: Short touch to auto seek up to the next radio station. Long touch to activate manual seek mode.
5. Touch to view and activate/deactivate: **RDS, Traffic, News, AF and REG.**
6. Touch to view a list of available stations on the FM waveband.
7. Touch to enter a station frequency on the current waveband, using the numeric keypad. Select **OK** or wait for automatic tuning.
8. Station presets: Touch and release a preset to tune to the station stored on that preset. Touch and hold to store the current station to that preset.

## DAB radio

Digital radio channels are arranged into groups called ensembles. Each digital channel may also have associated subchannels.

*Note: Subchannels are temporary channels and may be discontinued at any time.*



1. Touch to view and select a DAB band (DAB 1, 2 or 3). The radio will tune to the last used channel on that band. Touch again to close.
2. Seek down: Short touch to seek the previous available channel. Long touch to seek the previous available ensemble. The first channel in the new ensemble will be selected.
3. Touch to view DAB text and channel information.
4. Seek up: Short touch to seek the next available channel. Long touch to seek the next available ensemble. The first channel in the new ensemble will be selected.

5. Touch to view:  
**Options:** activate/deactivate **FM Traffic** and **Link DAB** and to alter **DAB country** and **DAB format** settings (with the vehicle stationary).  
**Announcements:** select an alarm announcement and up to 3 other announcement types from the list. Selected types will interrupt the current programme, when broadcast.
6. Touch to view a list of available ensembles and channels. The list can be sorted by **Ensemble, Channel, Subchannel**, or by **Category**. If an ensemble is selected from the list, all available channels from that ensemble will be displayed. Sorting by **Subchannel** is only available when the current channel is broadcasting subchannels. If **Category** is selected, touch the chosen category to view corresponding channels, before making your selection from the list.
7. If subchannels are broadcast by the current channel, **Subchannel** will be active. Touch and then select the required subchannel with the seek soft keys.

8. Select to scan for all available DAB ensembles/channels. This needs to be done before using the DAB radio for the first time. **Auto-tune** is also useful when travelling long distances, so regional ensembles can be tuned.

9. Station presets: Touch and release a preset to tune to the station stored on that preset. Touch and hold to store the current station to that preset.

*Note: If you attempt to select a preset channel that is now unavailable or invalid, **No reception** is displayed.*

## Portable media



Includes CD, iPod®, USB, AUX and **Bluetooth®** wireless technology devices. The full infotainment system also includes Stored CD.

1. Touch to display all of the options. Select an option.

*Note: Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.*

2. Touch to switch traffic and news on or off. Additionally, for MP3 recorded media, you can select the number of list entries that are skipped when you use the page up/down arrows.

3. Touch to view the current CD or Stored CD track list. Select a track to start playback.

4. Touch to view contents of the connected device and start playback.

5. Touch to view and manage the Stored CD memory.

- Select **Upload** alongside an empty slot to upload a CD. There are 10 slots available.
- Select **Replace** to overwrite an existing CD.


*Note: Loading time is dependent on content type. Other features can be selected while upload is in progress.*

6. Skip/Scan forwards.

## 7. Repeat

In CD mode:

- Touch to repeat the current track continuously. Touch again to repeat the current Stored CD (or folder for MP3 discs) continuously until **Repeat** mode is cancelled. Touch again to cancel.

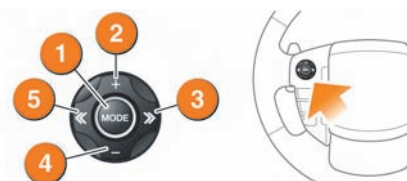Steering wheel audio control *See page 2, item 9.*

In USB or iPod mode:

- Touch to repeat the current track continuously. Touch again to repeat the current USB folder or to cancel iPod **Repeat** mode. Touch again to cancel USB **Repeat** mode.

*Note: Repeat mode is not available for Bluetooth wireless technology devices.*

8. Pause/Play: Select to pause playback. Select again to resume playback.


9. Information about the current track.

10. Touch to play random tracks from the current media. Touch again to cancel.

*Note: Shuffle mode is not available for Bluetooth wireless technology devices.*

11. Skip/Scan backwards.

## Connecting a device

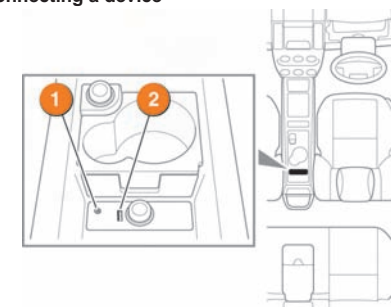

1. 3.5 mm AUX socket.

2. USB socket.