

hill descent.....	73
shift paddles.....	73
temporary manual selection.....	73
Auto mode (climate).....	56
Autostore	
storing radio stations.....	130
using a stored radio station.....	130
Auto zoom (navigation).....	116
Auxiliary device connection.....	99
Auxiliary heater.....	57

B

Battery	
boost starting.....	170
care.....	168
charging.....	171
connecting jump leads.....	169
effects of disconnection.....	172
replacing.....	171
using a starting aid.....	170
warning lamp.....	34
Bluetooth	
compatibility.....	108
pairing	
via the phone.....	108
portable media	
pairing.....	100
playing.....	99
telephone.....	107
icons.....	110
overview.....	107
pairing.....	109
phonebook.....	111
safety.....	108
Bonnet	
closing.....	150
opening.....	150
Booster seats for larger children.....	25
Boost starting.....	170
Brakes	
ABS warning lamp.....	36
brake pads.....	147
control with ABS.....	75
electronic brake force distribution.....	75

emergency brake assist.....	75
fluid check.....	165
fluid specification.....	165
fluid top up.....	165
handbrake.....	76
important information.....	75
parking brake warning lamp.....	35
steep slope control.....	75
warning lamp.....	34–35
Brake temperature.....	84
Bulbs	
changing a bulb.....	152
direction indicator.....	156
front fog lamp.....	156
halogen.....	153
headlamp.....	153
interior bulbs replacement.....	159
licence plate.....	158
number plate.....	158
rear lamp.....	157
side repeater lamp.....	157
specification.....	206

C

Call volume.....	111
Cameras	
rear camera.....	78
Cancelling an announcement	
standard audio system.....	132
Capacities.....	203
CD loading.....	135
CD player	
CD loading.....	87
portable media pairing.....	100
portable media playing.....	99
standard audio system.....	135–136
CD player (Standard).....	135
adaptive volume control.....	130
bass and treble setting.....	130
connecting portable media devices.....	136
controls.....	129
loading.....	135
MP3 file playing.....	139
repeat and shuffle.....	136