OFF-ROAD RECOVERY

▲ If the towing eyes are to be used for off-road recovery, it is essential that off-road driver training, covering recovery techniques, is undertaken. Further information on off-road driver training can be found at http://www.landroverexperience.com.

TOWING THE VEHICLE ON FOUR WHEELS

	2	۱	
/	1	1	١

Do not undock the Smart key, as this will lock the steering column.

- If the vehicle's battery is to be disconnected, the steering column must be unlocked first. It is not possible to unlock the steering column with the battery disconnected.
- If the engine cannot be used during towing, there will be no power assistance to the braking or steering systems. This will result in a much greater effort to steer and stop the vehicle and a greatly increased stopping distance.
- (!)

Only tow the vehicle in a forward direction with all 4 wheels on the ground. Towing in a reverse direction with 2 wheels on the ground will cause serious damage to the transmission.

The vehicle should only be towed for a maximum of 50 km (30 miles) at a maximum speed of 50 km/h (30 mph). Towing for a greater distance or at a higher speed, may result in serious damage to the transmission.



Do not tow the vehicle if the gearbox cannot be set in Neutral $({\bf N}).$

The following procedure must be carried out carefully to prevent damage to the vehicle:

- 1. Secure the towing attachment from the recovery vehicle to the front towing point.
- 2. With the parking brake applied, switch on the ignition.
- **3.** Apply the foot brake and place the gear selector into Neutral (**N**).
- 4. Switch off the ignition.
- 5. The ignition may be switched on to allow operation of indicators, brake lamps etc.
- 6. Release the parking brake before towing the vehicle.
- Leaving the ignition switched on for extended periods will drain the vehicle's battery.

AFTER TOWING ON FOUR WHEELS

- 1. Apply the parking brake.
- 2. Switch on the ignition and apply the foot brake.
- **3.** Place the gear selector in the Park (**P**) position.
- 4. Switch off the ignition.
- 5. Remove the towing attachment and refit the cover to the front towing point.



Use extreme caution when detaching towing equipment. Vehicle movement is possible, which can result in serious injury.