


VIDEO MEDIA PLAYER CONTROLS

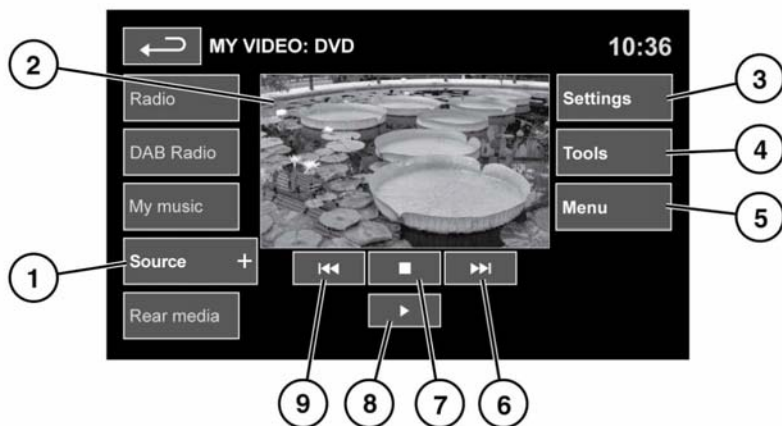

E151161

- Source:** Video input selection.
Touch to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.
***Note:** After 5 seconds without use, the My video menu will close.*
- Preview screen for video media information:**
Touch to select full screen mode.
Short touch the screen again to view the controls at any time.
To return to preview mode, touch and hold the full screen view.
- Settings:** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.
VOD allows playing of DivX VOD content from a video media. The 8 digit registration code will be displayed when the VOD soft key is touched.
The player must also be registered with DivX. See **87, LICENSING**.
- Tools:** The following options can be selected:
 - GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
 - Subtitles.
 - Angle.
 - Audio.
 - Top menu.
- Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
- Seek up:** Select to view the next DVD chapter or to scroll through video media files.
- Select to pre-stop playback. A second touch will stop and reset the DVD.
- Select to start/restart play.
- Seek down:** Select to view the previous DVD chapter or to scroll through video media files.