

5. Press to answer an incoming call. Press and release to dial a number/contact. Press and release to access the Last 10 dialled list. Press and hold to access phonebook list view.
6. Press to end a call or to reject an incoming call.

Note: When scrolling through a phonebook or the Last 10 list, each contact is also displayed in the Message centre.

Note: In order to scroll through any Last 10 list, the 'phone' button (5) must first be pressed.

CALL VOLUME

The phone call volume is operated by the Audio system's volume control.

If the Audio system is in use when a phone call is active, the Audio system source is suppressed for the duration of the call.

PHONEBOOK

Contacts stored in the memory of a paired phone can be automatically downloaded to the vehicle's phonebook each time the phone is connected to the system.

Certain phones store the phonebook in 2 different areas, the SIM card and the phone memory. The vehicle's system will access only those numbers stored in the phone's memory.

To access contacts from the phonebook:

1. From the **Phone** menu, select **Phonebook**.
2. Using the keyboard, select the letter you wish to search under.
3. Select **List** to view the phonebook.
4. Identify the required contact from the displayed list and touch to call. If a contact has more than 1 number stored, select the required number from the list.

Note: It may be necessary to use the scroll bar to see the entire list.

There are also options to view more contact information, by selecting the corresponding **i** key.

If your phone supports contact type data, you will be able to see a contact type icon in the vehicle's phonebook directory. These can be seen on the right side of each contact in the directory and will indicate one of the following types:



Default.



Mobile.



Home.



Work.