

Full screen view for video.....	103
Fuses	
changing.....	174
engine compartment fuse box.....	175
locations.....	173
luggage compartment fuse box.....	181
passenger compartment fuse box.....	177

G

Garage door opener.....	46
assistance.....	48
entry gate.....	47
erase all programming.....	47
programming.....	46
programming a rolling code device.....	47
programming a single button.....	47
Gearbox	
automatic.....	72
fault.....	73
gear shift warning lamp.....	36
hill descent.....	73
manual.....	73
General program.....	81
Global closing.....	8
Glow plugs	
warning lamp.....	35
Gradient release control	
ascent brake release.....	84
Grass/gravel/snow.....	81

H

Handbook symbols.....	2
Handbrake.....	76
Headlamps.....	38
beam pattern.....	39
bulb change.....	154
bulb changing.....	152
bulb identification.....	153
bulb specification.....	206
condensation.....	39
daytime running lamps.....	38
driving abroad.....	39
high beam warning lamp.....	36

levelling.....	39
removal.....	153
washers.....	43
xenon.....	153
Head restraints.....	15
Heated screens.....	57
Heated seats.....	57
Heating and ventilation.....	55–56
auto setting.....	56
fuel burning heater.....	57
heated seats.....	57
manual.....	55
remote control batteries.....	60
timed climate.....	57
timed climate remote controls.....	59
using the remote control.....	59
Hill descent control.....	83
brake release control.....	84
brake temperature.....	84
operation.....	83
selecting.....	83
system fault.....	84
warning lamp.....	37
warning messages.....	84
Home (navigation).....	120
Homelink.....	46
assistance.....	48
erase all programming.....	47
gate/door opener.....	47
programming.....	46
programming a single button.....	47
programming the garage door opener.....	46
rolling code device programming.....	47

I

Ignition	
rolling re-start.....	69
switching on.....	69
Indicators warning lamp.....	37
Information messages.....	34
Infotainment	
automatic station retune.....	92
CD loading.....	87
DAB radio.....	93