


### USING THE TIMED CLIMATE REMOTE

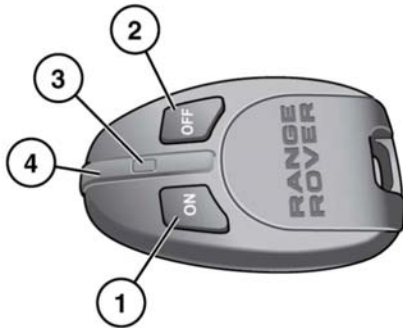

E144900

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

**Note:** Avoid touching the antenna when operating the **ON** or **OFF** button.

The remote control has an approximate range of 100 metres. There is no need to point the remote control at the vehicle.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate green to confirm that a remote climate programme has been initiated. The LED flashes once every 2 seconds to indicate that the heater is active.

The remote climate programme will continue for 20-30 minutes, after which it will switch off automatically to prevent the vehicle's battery from discharging. It also turns off automatically if the engine is started.

The LED indicator signals various states and conditions for the remote climate as follows:

- Illuminates green when the **ON** button is pressed, then quickly flashes green to indicate that heater operation has been requested.

- Illuminates green followed by red when the **OFF** button is pressed, to indicate that the heater has been requested to shut down.
- Illuminates green, then quickly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is no communication with the receiver. This normally occurs if the vehicle is too far away.
- Illuminates green, then slowly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is an error.
- Flashes red when either the **ON** or **OFF** button is pressed to indicate that the Timed climate remote battery needs replacing.

**Note:** The Timed climate remote will only operate once per engine start in order to maintain optimum battery condition.

### ADDITIONAL REMOTES

Extra remote controls can be programmed to operate the heater. A maximum of 4 remote controls can be programmed to the vehicle. Contact a Dealer/Authorised Repairer to purchase extra remote controls and have them programmed to the vehicle.