

Vehicle recovery

RECOVERY METHOD


The method for recovery/transportation of the vehicle is on a transporter or trailer designed for that purpose.

- ❗ Make sure that vehicle recovery/transportation is carried out by suitably qualified personnel and the vehicle is secured correctly.
- ❗ The recovery agent must activate the Transmission park release before recovery commences. This procedure is covered in a separate publication for service personnel. Failure to activate the Transmission park release can result in serious transmission damage.
- ❗ This vehicle should not be towed on all 4 wheels and should not be recovered with the front or rear wheels suspended. Doing so can result in serious transmission damage.

TOWING POINTS

- ⚠ **The towing eyes at the front and rear of the vehicle are designed for on-road recovery only. If they are used for any other purpose, it may result in vehicle damage and serious injury.**
- ⚠ **Use extreme caution when moving or towing the vehicle. Death or serious injury may occur.**
- ⚠ **Use extreme caution when detaching towing equipment. Vehicle movement is possible which can result in serious injury.**
- ❗ Remove the front towing eye cover before driving off-road, to prevent damage or loss. The cover must be replaced before driving on the road.

The front towing eye is fixed and located behind the panel in the front bumper.

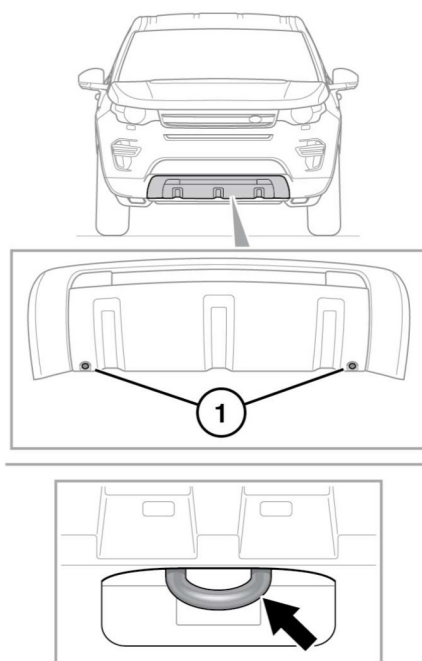

E165460

To access the front towing eye: Rotate the 2 fasteners (1) 90 degrees counter-clockwise. Pull the panel away from the front bumper.

The rear towing eye is located under the loadspace floor cover. The rear towing eye must be screwed into the towing point, located behind the panel on the right-side of the rear bumper.

Note: Panel design may vary depending on the vehicle specification.