

Maintenance

2. Turn the ignition on and then off again.
3. Immediately push the wiper control down to start the single wipe operation and turn the ignition on again.
The wipers will move to their service position.
4. When the new parts have been fitted, turn the ignition off. This will return the wipers to the park position.

WINDOW RESET

If the battery is disconnected or the power supply is interrupted, the windows must be reset.

Once the power supply is restored, reset as follows:

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for 1 second.
3. Repeat the procedure on each window.