

Entering the vehicle

- The approach illumination period, set at the factory, is 30 seconds. This delay period may be configured to provide illumination lasting between 0 and 240 seconds. See **49, INSTRUMENT PANEL MENU**.
6. Emergency key access: Slide open the side cover to release, then remove.
 7. Remove the emergency key blade and unfold.
 8. If the Smart key fails to open the vehicle, insert the key blade into the slot at the base of the driver's door lock cover and gently lever the key blade upwards. Carefully rotate the door lock cover upwards, to lever the cover off the retaining clips.
 9. Insert the key blade into the exposed lock and turn to operate the lock. The alarm will sound until the Smart key is positioned correctly, to disarm the alarm: see **109, KEYLESS START BACKUP**.

Note: When replacing the door lock cover, locate the top retaining clips before pushing the cover into position.

10. Keyless entry/exit: Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

Note: A replacement Smart key can be obtained only from a Land Rover Dealer/Authorised Repairer. The Dealer/Authorised Repairer will require proof of identification and ownership. Notify your Land Rover Dealer/Authorised Repairer immediately if a Smart key is lost or stolen.

SINGLE/MULTI-POINT ENTRY

When you press the unlock button, the vehicle will unlock in one of two ways:

1. Single-point entry: Unlocks the driver's door and the fuel filler flap only. A second press is required to unlock the remaining doors and the tailgate.
2. Multi-point entry: Unlocks all of the doors, the fuel filler flap and the tailgate on the first press.

To change from Single to Multi-point entry (or vice versa), press both the lock and unlock buttons simultaneously for 3 seconds. The hazard warning lamps will flash twice to confirm the change.

This feature may also be set via **Vehicle Set-up** in the Instrument panel menu. See **49, INSTRUMENT PANEL MENU**.

Note: If, when the vehicle is unlocked, an audible warning is emitted, this will be a 'Mislock' error. There may be a fault with either of the alarm sensors. Consult a Dealer/Authorised Repairer as soon as possible.

GLOBAL OPENING

Press and hold the Smart key unlock button for 3 seconds to unlock the vehicle and open all of the windows.

To cancel Global opening, press any of the buttons on the Smart key or operate the driver's window switches. To stop a particular window opening, operate the relevant window switch.

Note: Global opening can be enabled and disabled via **Vehicle Set-up** in the Instrument panel menu. See **49, INSTRUMENT PANEL MENU**.

KEYLESS ENTRY

Keyless entry allows the vehicle to be opened if a Smart key is within 1.0 m (3 ft) of the door handle or the tailgate external switch.