

The indicator on the Parking aid button will illuminate to inform the driver that the system is active. To switch the Parking aid system off, press the button.

When the Parking aid system is switched off, the system will remain off until the next ignition cycle, reverse gear is selected, or the Parking aid button is pressed again.

**Note:** *If the system does not detect an object likely to come into close proximity with the vehicle, it will not display any tracking information in the Touch screen.*

When in reverse gear, both the front, side and rear sensors are active, enabling complete sensor detection around the whole perimeter of the vehicle. When in a forward gear, only the front and side sensors are active.

When objects are detected, the Parking aid system will emit a warning tone which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the obstacle is within 300 mm (12 ins).

**Note:** *The warning tone will stop when the distance between the vehicle and the object remains constant.*

The Parking aid and 360° Park Distance Control sensors operate at speeds up to 16 km/h (10 mph).

### PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, the switch indicator will flash. Also a graphic and the message **Parking Aid is not available. Please consult your dealer** will be displayed on the Touch screen. Contact a Dealer/Authorised Repairer as soon as possible.

### REAR CAMERA



**It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.**




Some overhanging objects or barriers which could cause damage to the vehicle, may not be detected by the camera.



The camera must be kept clean and free from debris or obstructions, for example, ice, frost, snow, leaves, mud or insects. Failure to keep the camera clean may result in miscalculation or false indications.


If the vehicle is fitted with a rear camera, this has priority over the Parking aids display.

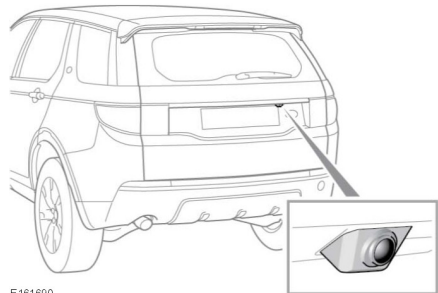

The rear camera is located on the tailgate (see illustration).

When reverse gear is selected, the screen automatically displays a wide angle, colour image from the rear of your vehicle. Overlaid on the image are reversing guidelines and an indication of which sensors are active.

# Parking aids

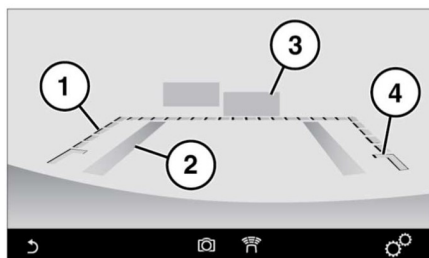

E164947

1. Dotted line: The safe working width of the vehicle (including exterior mirrors).
2. Solid line: The projected path based on current steering wheel position.
3. Parking sensor activation: A coloured area appears, to indicate which rear sensor(s) has been activated.
4. Tailgate access guideline: Do not reverse beyond this point if tailgate access is required.

To cancel the Rear camera display at any time, push the **HOME** menu button or touch the back soft key.

To adjust the camera settings while in reverse, touch anywhere on the Touch screen to display the user options.

For vehicles fitted with only a rear camera, touch the icon for the feature required and then the back icon:



Touch to enable/disable the Park assist guidance lines.




Touch to enable/disable the sensor/s active graphics.



Touch to enable/disable Hitch assist guidance lines. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guideline. See **96, HITCH GUIDANCE**.

For vehicles fitted with a Surround camera system:

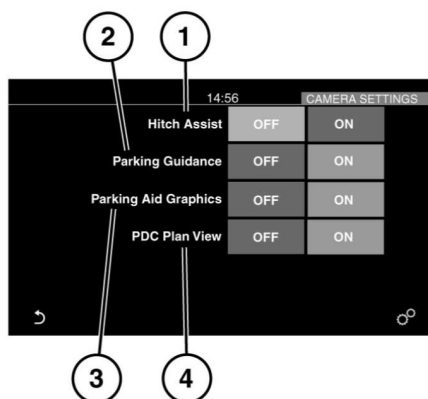

E165234

1. Hitch Assist, select OFF or ON. See **96, HITCH GUIDANCE**.
2. Parking Guidance, select OFF or ON.
3. Parking Aid Graphics, select OFF or ON.
4. PDC Plan View, select OFF or ON.

The Rear camera display on the Touch screen will discontinue when either of the following apply:

- A forward gear is selected for longer than 5 seconds.
- A forward gear is selected and/or vehicle speed is greater than 18 km/h (11 mph).