

- The engine **START/STOP** button is pressed without a valid Smart key present.

If the vehicle is fitted with a battery-backed sounder, the sounder will sound if the battery is disconnected, or an attempt is made to disconnect the sounder.

### FULL ALARM

The full alarm system is activated when the vehicle is double locked. See **14, DOUBLE LOCKING**.

Once activated, the alarm system will sound if:

- The bonnet, tailgate or a door are opened.
- Movement is detected within the vehicle's interior.
- The vehicle is raised or tilted.

If the vehicle is fitted with a Battery-backed sounder, the alarm system will also sound if:

- The vehicle battery is disconnected.
- An attempt is made to disconnect the Battery-backed sounder.

### INTERIOR PROTECTION

The interior protection feature of the full alarm system may be temporarily disabled via **Alarm sensors** in the **Vehicle set-up** menu. See **49, INSTRUMENT PANEL MENU**.

**Note:** If the interior protection is temporarily disabled, it will be automatically enabled the next time the vehicle is Double locked with the Smart key.

### KEYLESS LOCKING




**Never double lock the vehicle with people, children or pets inside. In the event of an emergency, they would be unable to escape and the emergency services would be unable to release them quickly.**

**Note:** The vehicle will not lock automatically.



The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console, etc.

**Note:** Loose coins, in the same pocket as the Smart key, may also affect its detection.

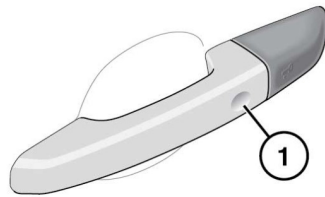

E166657

**Note:** Keyless locking will activate only if the Smart key is detected outside the vehicle. If no Smart key is present, no locking will occur.

- To single lock the vehicle, touch only the lock sensor on the door handle (**1**) once, without grabbing the door handle.

**Note:** Do not place your fingers around the back of the handle while touching the sensor; doing so will prevent the vehicle from locking.

The hazard warning lamps will flash once to confirm locking and the power fold mirrors will fold in (if enabled).

- To double lock the vehicle, touch only the lock sensor (**1**) twice within 3 seconds, without grabbing the door handle.

**Note:** Do not place your fingers around the back of the handle while touching the sensor; doing so will prevent the vehicle from locking.