

Airbags


 The passenger airbag should be disabled when a child restraint is fitted to the front passenger seat.

 Crash test data and statistics show that the safest place for a child to be restrained is in a child seat correctly fitted to the vehicle's rear seat.

 Do not use a child restraint on a seat protected by an operational airbag in front of it. Doing so presents a high risk of death or serious injury to the child in the event of an accident.

Select **Passenger Airbag** from the **Vehicle Set-up** menu, located in the **Main Menu**.

The displayed text and diagram will show the current **Passenger Airbag On** or **Off** status. Select **Change Setting** to choose either **On** or **Off**.

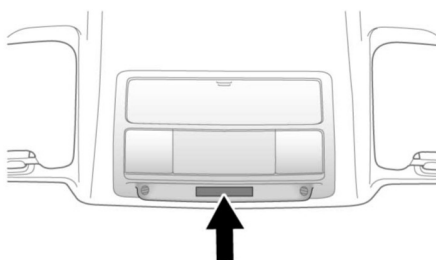

E161588

The warning lamp, mounted in the roof console, will display the operational status of the passenger front airbag, as shown in the following table.

Setting	Passenger airbag status	Airbag status indicator
Off	Disabled	PASSENGER AIRBAG OFF
On	Activated	ON PASSENGER AIRBAG*

* Displays for 60 seconds, then extinguishes.

Note: The Instrument panel will also display a warning for 4 seconds every time the ignition is switched on.

 As soon as the child seat is removed from the front passenger seat, the airbag must be turned on. Failure to do so will put any front seat passengers at greater risk of death or serious injury in the event of an accident.

 When checking the operational status of the front passenger airbag, make sure the ignition is switched on and the warning lamp bulb check period of 8 seconds has elapsed.

 Do not fit a child restraint to the front passenger seat if the Airbag warning lamp illuminates continuously with the ignition on. See 55, AIRBAG (AMBER).

 The passenger airbag must be disabled when a rearward facing child restraint is fitted to the front passenger seat.

FRONT AIRBAGS

The front passenger, driver and knee bolster airbags are designed to protect the front seat occupants in the event of an impact.