


**NOTE:** After approximately 3 seconds the menu is automatically closed, if you do not press the rotary switch.

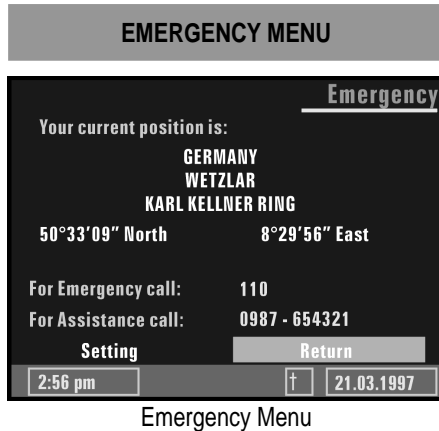

Select **Emergency** from the Main menu to enter the Emergency menu. The menu shows you the following information:

- The current car position with country, city, road and the longitude and latitude position determined by the received GPS data.
- The country-specific emergency phone number.
- A user-programmable Assistance phone number.

The Emergency function determines the car position with an accuracy of approx. 30 m.(33 yd).

**NOTE:** The country, city and street name are

only displayed if you travel within the boundaries of the CD-ROM currently loaded. If no CD or the incorrect CD is loaded, only your current longitude and latitude coordinates will be displayed, as long as the Global Positioning System is operating properly.

**NOTE:** The country-specific Emergency phone number is only displayed, if you travel within the boundaries of the currently loaded CD-ROM.

## STORING AN ASSISTANCE NUMBER

You can store a telephone number in the Emergency menu, for example the number of a breakdown service, automobile club, etc.

1. From the Emergency menu select **Setting**. The typewriter window is opened.
2. Enter the telephone number you want to store for assistance.
3. Select OK from the typewriter window to confirm your entry.
4. The stored number appears in the Emergency menu.
5. To leave the Emergency menu, select **Return** and press the **rotary switch**.