


Audio unit overview

AUDIO UNIT OVERVIEW

Audio overview

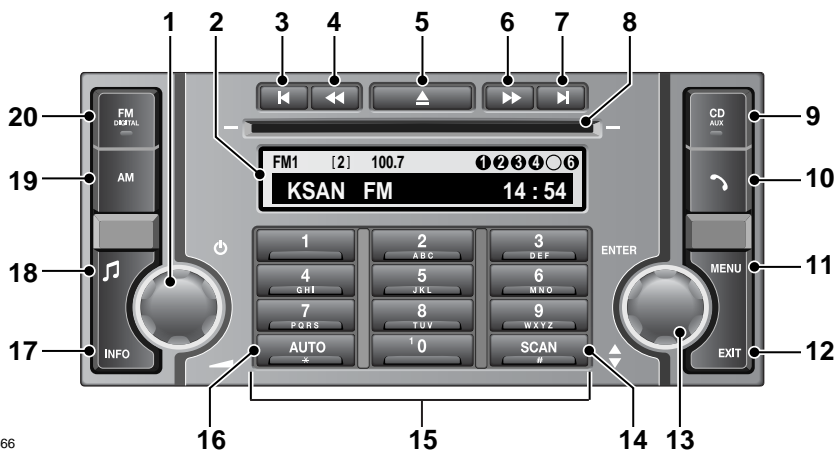

E85366

1. On or off and volume control
 - Press to switch on or off
 - Rotate to adjust volume
2. Information display screen
3. Rearward search or previous track button
 - Radio station automatic rearward search
 - Compact disc previous track or beginning of track
4. Manual tuning or review button
 - Radio station manual rearward search
 - Compact disc rearward search (review)
5. Compact disc eject button
6. Manual tuning or cue button
 - Radio station manual forward search
 - Compact disc forward search (cue)
7. Forward search or next track button
 - Radio station automatic forward search
 - Compact disc next track
8. Compact disc slot
9. Compact disc player and AUX mode button
10. Telephone mode button
11. Audio MENU button:
 - FM settings
 - Clock
 - CD settings
 - Random
 - AUX settings
12. EXIT button
13. Audio MENU control
 - Rotate to scroll through menu options or radio presets
 - Press to enable or disable the function
14. SCAN button
 - Press during CD play to listen to the first 10 seconds of each track
15. Input keypad
16. AUTO button
 - Press to automatically store radio stations

Audio unit overview

17. INFO button

- Press and release to activate a program type (PTY) search


18. Tone and volume settings button

- Press and release for tone settings menu
- Press and hold for volume settings menu

19. AM waveband button


20. FM waveband button

Basic audio functions

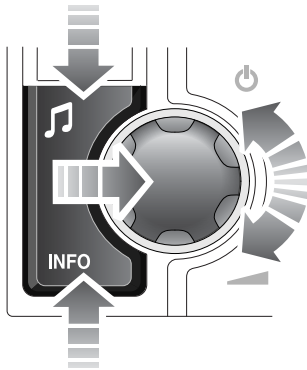

E83955

- Press rotary control to switch audio unit on or off.
- Rotate control to adjust volume or to adjust menu settings levels.
- Press and release tone button to access the tone settings menu.
- Press and hold tone button to access the volume settings menu.
- Press and release **INFO** button to activate a PTY search.

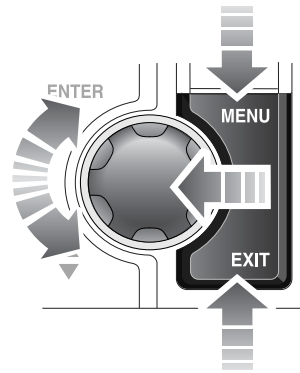

E83956

- Press **MENU** button to access various audio menus.
- Rotate control to scroll through menu items.
- Press rotary control to enter or confirm menu selection.
- Press and release **EXIT** button to go back to the previous screen.
- Press and hold **EXIT** button to return to main display.