


Cruise control

PRINCIPLE OF OPERATION

Cruise control enables the driver to maintain a constant road speed without using the accelerator pedal. This is particularly useful for motorway cruising, or for any journey where a constant speed can be maintained for a lengthy period.

USING CRUISE CONTROL

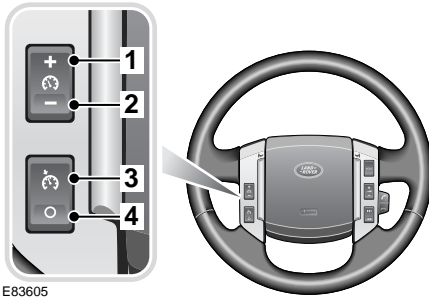

1. Set target speed, or increase speed.
2. Decrease speed.
3. Resume set speed.
4. Cancels cruise control operation without erasing memorised speed.

Note: Cruise control is not available in HDC, or when a Terrain Response special program has been selected.

Note: Do not use cruise control in traffic conditions where a constant speed cannot easily be maintained.

Note: Do not use cruise control on winding roads, or in slippery conditions.

Note: Do not use cruise control when driving off-road.

Note: Do not use cruise control with **SPORT** mode selected.

Engaging cruise control

CAUTION



When setting the cruise control to the speed limit it is important to remember that it is possible for the vehicle speed to increase when travelling downhill. This may result in the vehicle speed exceeding the speed limit.

Note: Cruise control can only be set or engaged at speeds in excess of 30 km/h (18 mph).

Accelerate until the desired speed is reached, then press the + switch until the warning indicator illuminates. This will set the vehicle's speed into the system's memory. Cruise control will now maintain that speed.



The cruise control warning indicator will illuminate to confirm cruise control is operational. Speed can be increased using the accelerator pedal as normal, to overtake for example. As soon as the accelerator pedal is released, the vehicle speed will return to the set cruising speed.

Note: If the accelerator pedal is pressed for more than 60 seconds, cruise control will be cancelled.

Suspending cruise control

Cruise control can be suspended by a single press of the cancel switch. The warning indicator will extinguish when cruise control is cancelled.

Cruise control will also be suspended if the brake pedal is pressed, the gear selector is moved to N, or if HDC or DSC are activated.

To resume cruise control operation at the previously set speed, press the resume switch.

Note: The set speed will not be erased by pressing the cancel switch. The set speed can only be erased by switching off the ignition.

Cruise control

Reducing the cruise speed

To reduce cruising speed, press and hold the — switch. Release the switch when the desired speed is reached, the new speed will be set and maintained.

The set speed can be reduced incrementally by tapping the — switch. Each press of the switch will decrease the speed by 2 km/h or 1 mph depending on which scale is in use.

Increasing the cruise speed

CAUTION



When setting the cruise control to the speed limit it is important to remember that it is possible for the vehicle speed to increase when travelling downhill. This may result in the vehicle speed exceeding the speed limit.

Press and hold the + switch to increase speed. Release the switch when the desired speed is reached, the new speed will be set and maintained.

The speed can be increased incrementally by tapping the + switch. Each press of the switch will increase the speed by 2 km/h or 1 mph depending on which scale is in use.

Speed can also be increased using the accelerator. When the desired speed is reached press the + switch to set and maintain the new speed.