


# Emergency equipment

---


## HAZARD WARNING FLASHERS

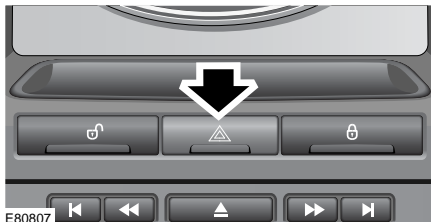

If the vehicle is stationary in an unsafe location, or may cause a hazard to other road users, switch on the hazard warning flashers. Press the switch to turn the hazard warning lamps on.

**Note:** Hazard warning lamps can be used when the ignition is on or off.

## WARNING TRIANGLE

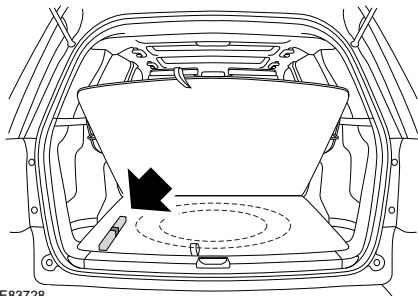

Storage position for a warning triangle is located on the left-hand side of the under-floor storage area.