


Instruments

INSTRUMENT PANEL OVERVIEW

Instrument panel

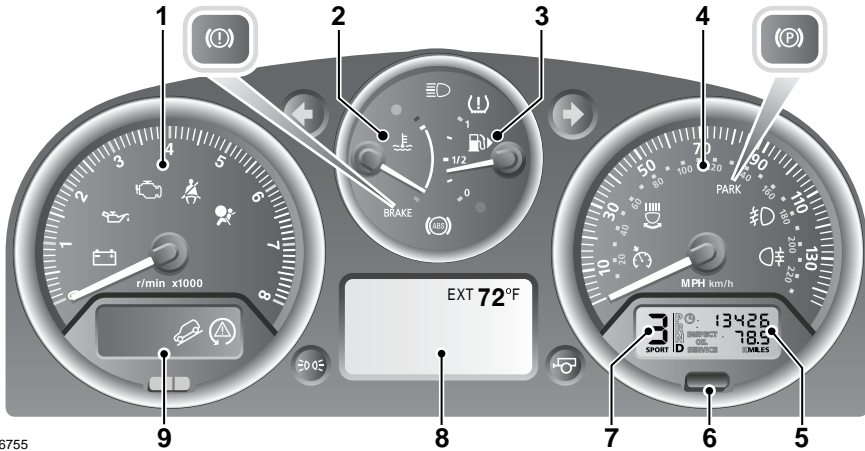

E86755

1. Tachometer.
2. Temperature gauge.
3. Fuel gauge.
4. Speedometer.
5. Odometer and trip recorder.
6. Trip recorder reset button.
7. Gear selector display.
8. Main message centre.
9. Warning indicator panel.

Instruments

Tachometer

Indicates engine speed in revolutions per minute (RPM) x 1000.

Temperature gauge

CAUTION



Serious engine damage can occur if the vehicle is driven whilst the engine is overheating.

If the pointer moves onto the red line and the red warning indicator illuminates severe engine damage can occur.

If the engine overheats, stop the vehicle as soon as safety permits. Switch the engine off and allow it to cool down. If the problem reoccurs, seek qualified assistance before continuing.

***Note:** If engine temperature rises to the point where overheating may occur, there may be a noticeable reduction in engine power, and the air conditioning may cease operation. This is a normal operating strategy to reduce load on the engine and assist with cooling.*

Fuel gauge

CAUTION



Never allow the vehicle to run out of fuel. The resulting mis-fire may cause serious damage to the catalytic convertor.

Once the fuel level has dropped to the point where the range is approximately 80 km (50 miles) the low fuel warning indicator will illuminate.

As a reminder for the location of the fuel filler, there is an arrow next to the fuel pump symbol which points to the relevant side of the vehicle.

Speedometer

Indicates road speed.

Odometer

Indicates the total distance which the vehicle has travelled.

Trip recorder

Indicates the distance travelled since the last reset, and can be used to measure the distance of individual journeys.

Trip recorder reset button

Resets the distance shown on the trip recorder to zero.

***Note:** Once the trip recorder has been reset to zero, the previously recorded distance will be lost.*

Gear selector display

Displays the currently selected gear on vehicle's fitted with automatic transmission.

Main message centre

Displays warning, and information messages. See **INFORMATION MESSAGES** (page 89).

Warning indicator panel

The warning indicator panel will provide system status information. See **WARNING INDICATORS (ATTENTION)** (page 16).