

# Locks

## LOCKING AND UNLOCKING

### Drive-away locking



The vehicle can be configured by a Land Rover Dealer to lock automatically when in motion.


Contact your Dealer for further information.

### Mis-lock when attempting to lock the vehicle

If one of the doors, the hood, or the taildoor are not shut fully the horn will emit a single tone. The vehicle will not fully lock until the door, hood, and taildoor are fully closed.

## LOCKING AND UNLOCKING FROM INSIDE THE VEHICLE


### Door buttons and levers

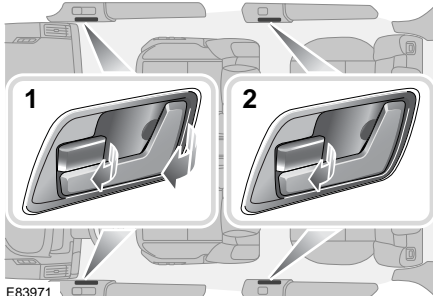

1. The front doors can be unlocked using the door buttons, or unlocked and opened using the lever.
2. The rear doors are unlocked using the door buttons. If the doors are locked, operating the lever will have no effect.

**Note:** For information on operating the child safety locks. See **CHILD SAFETY LOCKS** (page 59).

### Facia buttons

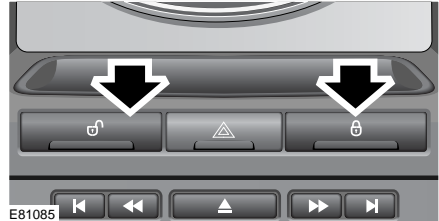

To lock or unlock the vehicle press the respective button on the facia. This will lock, or unlock, all doors and the taildoor.

**Note:** Pressing both buttons simultaneously, and holding for three seconds will release the taildoor.