 


Starting the engine

GENERAL INFORMATION

 
Docking the remote

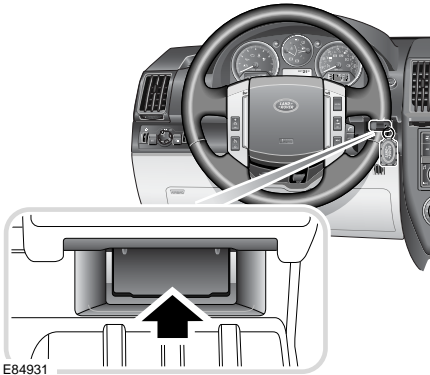

E84931

Before the engine can be started, the remote control will need to be docked with the buttons facing upwards.

Start/Stop button

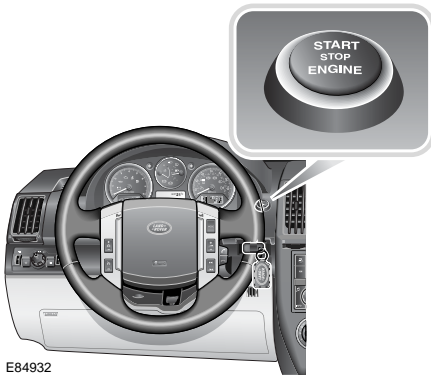

E84932

The start/stop button is used to start or stop the engine, or to turn on the ignition without starting the engine.

Switching on the ignition

The ignition can be switched on without starting the engine. Without pressing the brake pedal, press the start/stop button and hold until the warning indicators illuminate, then release the button.

Starting the engine

STARTING A PETROL ENGINE

Starting

WARNING

 
 
 


Never start the engine, or leave it running, when the vehicle is in an enclosed space. Exhaust gasses are poisonous and can cause unconsciousness and death if inhaled.

CAUTION



If the engine fails to start, do not continue cranking as this will discharge the battery. It may also damage the catalytic convertor due to unburnt fuel passing through the exhaust.

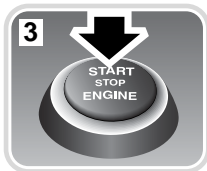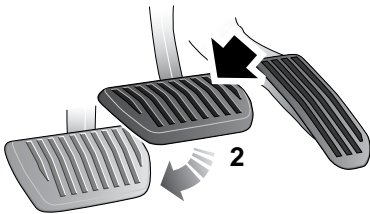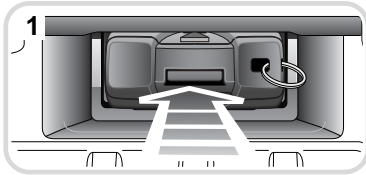



E81332

1. Insert the remote control into the docking port with the buttons facing upwards, and press to latch.

2. Press the brake pedal.
3. With the brake pedal firmly depressed, briefly press and release the start button. The engine will crank automatically until it starts.

Stopping the engine

  Before stopping the engine, ensure that the vehicle is parked safely with the park brake applied.

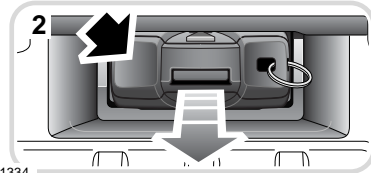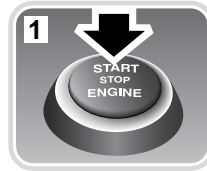

E81334

1. Select **P** (Park) and Press the Start/Stop button.
2. Press the remote to unlatch it, then remove it from the docking port by gripping the sides. Do not pull the remote out using the keyring attachment as this may remove only the emergency key.

Note: **P** (Park) must be selected before the remote can be removed.